

PMC6

User Manual

Version: 20231030

Table of Content

1. INTRODUCTION	3
1-1 SPECIFICATION	3
1-2 APPEARANCE	3
1-3 LAYOUT	4
2. PIN ASSIGNMENT	5
2-1 SCANHEAD CONTROL	5
2-2 LASER CONTROL	6
2-3 MOTOR SERVO CONTROL	8
2-4 OTHERS CONTROL	9
3. INSTALLATION AND CABLE CONNECTION	11
3-1 PMC6 INSTALLATION	11
3-2 CABLE	14
3-2-1 DIFFERENTIAL	14
3-2-2 OTHERS	14
3-3 D-SUB WELDING	15
3-4 ADAPTOR CABLE	16
3-5 SCANNER CABLE CONNECTION	17
3-5-1 XY2-100 16BIT SCANNER	17
3-5-2 RAYLASE XY2-100-E 18BIT SCANNER	18
3-5-3 CTI XY2-100 20BIT SCANNER	18
3-5-4 CANON 20BIT / 64BIT SCANNER	18
3-5-5 ME-LINK SCANNER	19
3-5-6 SL2-100 20BIT SCANNER	19
3-6 STEPPER / SERVO MOTOR SERVO CABLE CONNECTION	20
3-6-1 DIFFERENTIAL SIGNAL	20
3-6-2 COMMON ANODE	20
3-6-3 COMMON CATHODE	20
3-7 SENSOR CONNECTION	21
3-7-1 COMMON CATHODE SENSOR (NPN)	21
3-7-2 COMMON ANODE SENSOR (PNP)	21
3-8 OPTICAL COUPLER CONNECTION	21
3-9 START AND STOP CONNECTION	22
3-9-1 BUTTON	22
3-9-2 SENSOR	22
3-9-3 TTL SIGNAL	23
3-10 ENCODER SIGNAL	23
3-11 TTL CONNECTION	24

3-11-1 TTL INPUT	24
3-11-2 TTL OUTPUT.....	25
3-12 HWCONFIG SETTING DESCRIPTION	26
3-12-1 SCANNER TYPE	26
3-12-2 SCANNER ALIGNMENT.....	27
3-12-3 START / STOP TYPE.....	27
3-12-4 EXTENSTION	27
3-12-5 MOTION SETTING.....	27
3-12-6 DAC SETTING.....	27
3-12-7 DAC SCALE TABLE.....	28
3-12-8 DAC TEST	28
3-12-9 SIGNAL SETTING	28
3-12-10 CARD ID DEFINE	28
3-12-11 INFORMATION	28
3-12-12 BUTTON	28
4. SPI LASER SETTINGS	29
4-1 PROGRAM SETTINGS.....	29
4-1-1 SOFTWARE CONTROL INTERFACE.....	29
4-1-2 HARDWARE CONTROL INTERFACE	30
4-2 PIN ASSIGNMENT	31
4-2-1 SOFTWARE CONTROL INTERFACE (RS232)	31
4-2-2 HARDWARE CONTROL INTERFACE (HWI).....	32
5. IPG LASER SETTINGS	35
5-1 PROGRAM SETTINGS (ALSO APPLY FOR RAYCUS AND JPT LASER).....	35
5-2 PIN ASSIGNMENT	36
6. OMRON LASER SETTINGS	37
6-1 PROGRAM SETTINGS.....	37
6-2 PIN ASSIGNMENT	37
7 USING RS-232	38
7-1 WHAT IS RS-232	38
7-2 SETTING TO USE RS-232 TO CONTROL LASER.....	38
APPENDIX1 : VARIOUS LASER SETTING MODES	39
TYPE 1 : CO2 MODE	39
TYPE 2 : YAG 1-3 MODE	40
TYPE 3 : R05 MODE	41
APPENDIX2 : LED STATUS	42


1. Introduction

PMC6 is a high performance PCIe interface card designed for Laser Marking System. Support common used brands of 16'18'20-bits high resolution ScanHead, and is compatible to multiple communication protocol. It reserves plenty of I/O capacity for flexible connecting with automatic equipment or lasers requiring additional I/O. PMC6 features complete stepper and servo motor control function, and can control four axes simultaneously. Besides, it provides variety kinds of extending port for multiple types of connection requirements.


1-1 Specification

- ◆ Support common used brands of 16'18'20-bits high resolution ScanHead.
- ◆ Support output up to 3 axes digital scanner signal * 2.
- ◆ Build-in DSP. No occupation of PC CPU resource.
- ◆ Scanner digital signal refresh rate: 10 us/times.
- ◆ FPK, PPK, R05 first pulse suppression.
- ◆ Two 16-bits analog control signals.
- ◆ 3-way encoder inputs.
- ◆ PWM maximum output frequency is 10MHz, minimum pulse width is 0.05μs.
- ◆ 4-way digital step/servo motor control signals at the same time, the maximum output frequency is 10MHz.
- ◆ General 16-bits digital outputs, 16 bit digital inputs.
- ◆ Specific 16-bits laser control digital outputs.
- ◆ Support for Windows XP / 2000 / Vista / Windows 7 / 8 / 8.1/ Windows 10.

1-2 Appearance

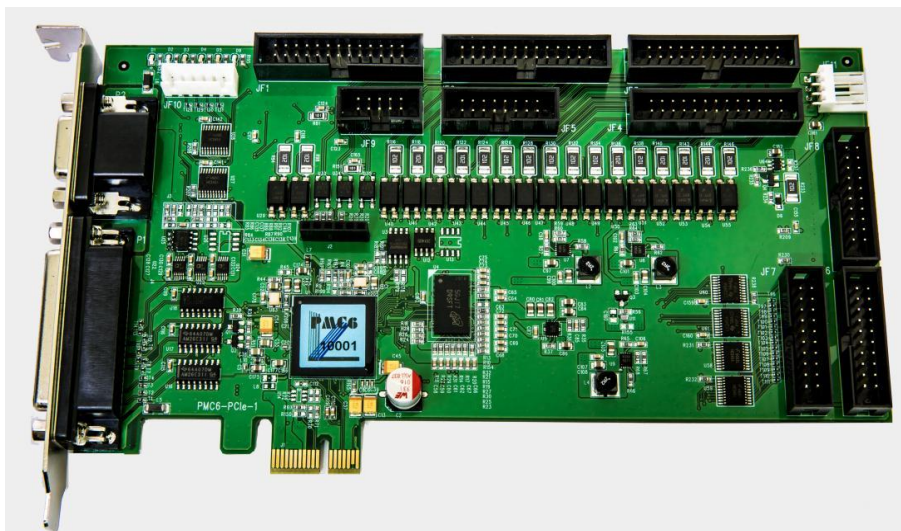


1-3 Layout

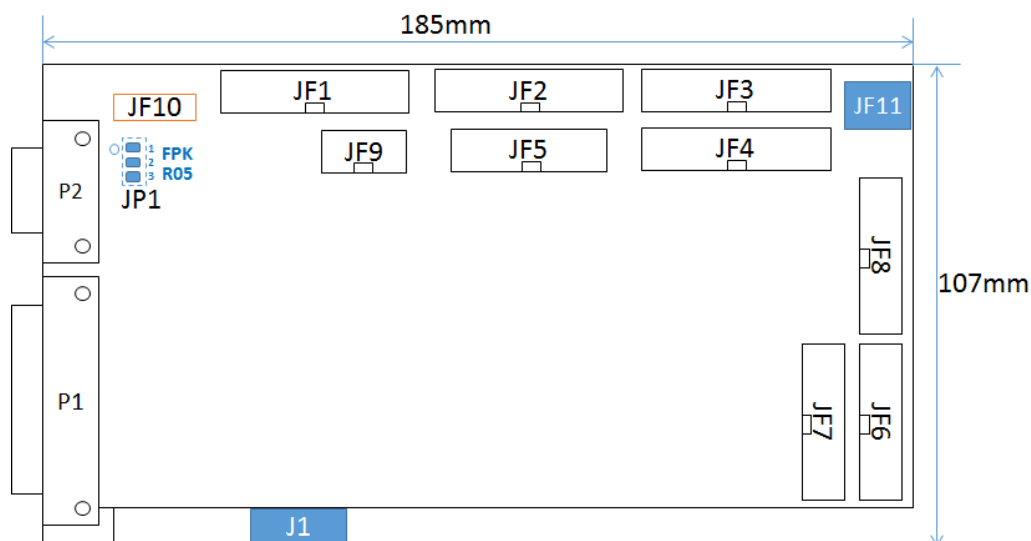

名稱	用途	説明
P1	SCANHEAD1	SCANHEAD 1 Connector. (D-SUB 25-Pin Female) Default: XY2-100 16-bits ・ adaptable to :Raylase XY2-100-E 18-bits・CTI XY2-100 20-bits・Canon 20-bits・Canon 64-bits.
P2	LASER_CONNECTOR	Laser control and analog output port (D-SUB 15-Pin female connector)
JF1	SCANHEAD2	SCANHEAD 1 Connector, independent to P1. (26Pin box connector) Default:XY2-100 16-bits ・ adaptable to :Raylase XY2-100-E 18-bits・CTI XY2-100 20-bits・Canon 20-bits・Canon 64-bits.
JF2	LASER_EXTENSION	Extension laser control and 16-bit digital output port (26-Pin box header connector)
JF3	MOTOR_X_Y	XY Table port (26-Pin box header connector)
JF4	MOTOR_Z_R	Z-axis and rotary port (26-Pin box header connector)
JF5	ENCODER	XY encoder port (16-Pin box header connector)
JF6	INPUT	16-bits digital input port (20-Pin box header connector)
JF7	EXTENSION	Extension 16-bits digital output port (20-Pin box header connector)
JF8	OUTPUT	16-bits digital output port (20-Pin box header connector)
JF9	ENCODER	Z encoder port (10-Pin box header connector)
JF10	LED Signal Out	D2~D5 LED Signal Output.
JF11	Power In	This is necessary. Otherwise there is no signal output. PMC6 V3 has been removed.
JP1(BOT)	FPK / R05	1 、 2 Close : FPK 2 、 3 Close : R05

2. Pin Assignment

2-1 ScanHead Control

P1(ScanHead 1) : D-SUB 25F		JF1(ScanHead 2) : 26Pin Box	
 DO NOT CONNECT (25) GND (24) GND (23) DO NOT CONNECT (22) STATUS1+ (21) STATUS3+ (20) STATUS2+ (19) CHAN3+ (18) CHAN2+ (17) CHAN1+ (16) SYNC+ (15) CLOCK+ (14) (13) DO NOT CONNECT (12) DO NOT CONNECT (11) GND (10) DO NOT CONNECT (9) DO NOT CONNECT (8) STATUS1- (7) STATUS3- (6) STATUS2- (5) CHAN3- (4) CHAN2- (3) CHAN1- (2) SYNC- (1) CLOCK-		CLOCK- (1) (2) CLOCK+ SYNC- (3) (4) SYNC+ CHAN1- (5) (6) CHAN1+ CHAN2- (7) (8) CHAN2+ CHAN3- (9) (10) CHAN3+ STATUS2- (11) (12) STATUS2+ STATUS3- (13) (14) STATUS3+ STATUS1- (15) (16) STATUS1+ DO NOT CONNECT (17) (18) DO NOT CONNECT DO NOT CONNECT (19) (20) GND GND (21) (22) GND DO NOT CONNECT (23) (24) DO NOT CONNECT DO NOT CONNECT (25) (26) DO NOT CONNECT	
Descriptions	Signal Type	Remark	
CLOCK	Differential Output	$V_{OH} : +5V$ 、 $I_{omax} : 35mA$	
SYNC	Differential Output	$V_{OH} : +5V$ 、 $I_{omax} : 35mA$	
CHAN1	Differential Output	$V_{OH} : +5V$ 、 $I_{omax} : 35mA$	
CHAN2	Differential Output	$V_{OH} : +5V$ 、 $I_{omax} : 35mA$	
CHAN3	Differential Output	$V_{OH} : +5V$ 、 $I_{omax} : 35mA$	
STATUS2	Differential Input	$+2V < V_{IH} < +5V$	
STATUS3	Differential Input	$+2V < V_{IH} < +5V$	
STATUS1	Differential Input	$+2V < V_{IH} < +5V$	
GND	PC Power 0V		


Note1 : JF1 connect with 25 to 26convector has the same interface with P1 port.

Note2 : V_{OH} : High Level Output Voltage (No Resistive load)

I_{omax} : Maximum Output Current

V_{IH} : High Level Input Voltage.

2-2 Laser Control

P2 : HD-SUB 15F			
			
Pin	Descriptions	Signal Type	Remark
1	Analog Out1	0V ~ 11V Output	Default 0V ~ +10V (HWConfig Setting)
2	Analog Out2	0V ~ 11V Output	Default 0V ~ +10V (HWConfig Setting) (Note3)
3	Analog GND	Analog GND	Isolated
4	PWM	TTL Output	V _{OH} : +5V 、 I _{omax} : 25mA (Note2)
5	FPK or R05	TTL Output or Analog 0V ~ 5V	Jumper JP1 select FPK or R05 mode. Default is FPK. (JP1 Setting) (Note3)
6	Laser On/Off	TTL Output	V _{OH} : +5V 、 I _{omax} : 35mA
7	Leading Light On/Off	TTL Output	V _{OH} : +5V 、 I _{omax} : 35mA
8	Shutter	TTL Output	V _{OH} : +5V 、 I _{omax} : 35mA
9	CW select	TTL Output	V _{OH} : +5V 、 I _{omax} : 35mA
10	Lamp On/Off	TTL Output	V _{OH} : +5V 、 I _{omax} : 35mA
11	Start power saving mode	TTL Output	V _{OH} : +5V 、 I _{omax} : 35mA
12	/START	Dry Contact or Optical coupling Input	Default Dry Contact (HWConfig Setting)
13	/STOP	Dry Contact or Optical coupling Input	Default Dry Contact (HWConfig Setting)
14	Vout_5V	PC Power +5V Output	
15	Digit GND	PC Power 0V	

Note1 : V_{OH} : High Level Output Voltage (No Resistive load)

I_{omax} : Maximum Output Current

V_{IH} : High Level Input Voltage.

Note2 : Because PWM use High-Speed IC, the output current is small.

Note3 : PMC6 V3.1 does not support Analog2 and R05.

JF2 : 26Pin Box		26 to 25 Line : D-SUB 25F	
Analog1 (1) Analog2 (3) PWM (5) FPK / R05 (7) Laser On / Off (9) Leading Light On / Off (11) Shutter (13) CW Select (15) Lamp On / Off (17) Power Saving Mode (19) IPG MO (21) Reserved Output (23) GND (25)			

Note1 : V_{OH} : High Level Output Voltage (No Resistive load)

I_{max} : Maximum Output Current

I_{max} : Maximum Collector Current.

Note2 : Because PWM use High-Speed IC, the output current is small.

Note3 : PMC6 V3.1 does not support Analog2 and R05.

2-3 Motor Servo Control

JF3 : 26Pin Box		26 to 25 Line : D-SUB 25F	
Pulse / CW X+ (1) Direction / CCW X+ (3) InPosition X+ (5) Home X+ (7) Limit XP+ (9) Limit XN+ (11) Vout_5V (13) Pulse / CW Y+ (15) Direction / CCW Y+ (17) InPosition Y+ (19) Home Y+ (21) Limit YP+ (23) Limit YN+ (25)	(2) Pulse / CW X- (4) Direction / CCW X- (6) InPosition X- (8) Home X- (10) Limit XP- (12) Limit XN- (14) Pulse / CW Y- (16) Direction / CCW Y- (18) InPosition Y- (20) Home Y- (22) Limit YP- (24) Limit YN- (26) GND	Pulse / CW X+ (1) Direction / CCW X+ (2) InPosition X+ (3) Home X+ (4) Limit XP+ (5) Limit XN+ (6) Vout_5V (7) Pulse / CW Y+ (8) Direction / CCW Y+ (9) InPosition Y+ (10) Home Y+ (11) Limit YP+ (12) Limit YN+ (13)	(14) Pulse / CW X- (15) Direction / CCW X- (16) InPosition X- (17) Home X- (18) Limit XP- (19) Limit XN- (20) Pulse / CW Y- (21) Direction / CCW Y- (22) InPosition Y- (23) Home Y- (24) Limit YP- (25) Limit YN-
JF4 : 26Pin Box		26 to 25 Line : D-SUB 25F	
Pulse / CW Z+ (1) Direction / CCW Z+ (3) InPosition Z+ (5) Home Z+ (7) Limit ZP+ (9) Limit ZN+ (11) Vout_5V (13) Pulse / CW R+ (15) Direction / CCW R+ (17) InPosition R+ (19) Home R+ (21) Limit RP+ (23) Limit RN+ (25)	(2) Pulse / CW Z- (4) Direction / CCW Z- (6) InPosition Z- (8) Home Z- (10) Limit ZP- (12) Limit ZN- (14) Pulse / CW R- (16) Direction / CCW R- (18) InPosition R- (20) Home R- (22) Limit RP- (24) Limit RN- (26) GND	Pulse / CW Z+ (1) Direction / CCW Z+ (2) InPosition Z+ (3) Home Z+ (4) Limit ZP+ (5) Limit ZN+ (6) Vout_5V (7) Pulse / CW R+ (8) Direction / CCW R+ (9) InPosition R+ (10) Home R+ (11) Limit RP+ (12) Limit RN+ (13)	(14) Pulse Z- (15) Direction Z- (16) InPosition Z- (17) Home Z- (18) Limit ZP- (19) Limit ZN- (20) Pulse R- (21) Direction R- (22) InPosition R- (23) Home R- (24) Limit RP- (25) Limit RN-
Descriptions	Signal Type	Remark	
Pulse / CW	Differential Output	V_{OH} : +5V 、 I_{max} : 35mA (HWConfig Setting)	
Direction / CCW	Differential Output	V_{OH} : +5V 、 I_{max} : 35mA (HWConfig Setting)	
InPosition	Optical coupling Input	V_{Imax} : +24V	
Home	Optical coupling Input	V_{Imax} : +24V	
Limit+	Optical coupling Input	V_{Imax} : +24V	
Limit-	Optical coupling Input	V_{Imax} : +24V	
Vout_5V	PC Power +5V Output		
GND	GND		

Note : V_{OH} : High Level Output Voltage (No Resistive load)

I_{max} : Maximum Output Current

V_{Imax} : Maximum Input Voltage

2-4 Others Control

JF5 : 16Pin Box				JF9 : 10Pin Box			
ENCODER XA- (1)	■ ●	(2) ENCODER XA+		ENCODER ZA- (1)	■ ●	(2) ENCODER ZA+	
ENCODER XB- (3)	● ●	(4) ENCODER XB+		ENCODER ZB- (3)	● ●	(4) ENCODER ZB+	
ENCODER XZ- (5)	● ●	(6) ENCODER XZ+		ENCODER ZZ- (5)	● ●	(6) ENCODER ZZ+	
ENCODER YA- (7)	● ●	(8) ENCODER YA+		GND (7)	● ●	(8) GND	
ENCODER YB- (9)	● ●	(10) ENCODER YB+		Vout_5V (9)	● ●	(10) Vout_12V	
ENCODER YZ- (11)	● ●	(12) ENCODER YZ+					
GND (13)	● ●	(14) GND					
Vout_5V (15)	● ●	(16) Vout_12V					

Descriptions	Signal Type	Remark
Encoder A、B、Z(Index)	Differential Input	$+2V < V_{IH} < +5V$ 、 $V_{IL} < +0.8V$
Vout_5V	PC Power +5V Output	
Vout_12V	PC Power +12V Output	
GND	PC Power 0V	

Note : V_{IH} : High Level Input Voltage

V_{IL} : Low Level Input Voltage

JF6 : 20Pin Box			
Input 1 (1)	■ ●	(2) Input 2	
Input 3 (3)	● ●	(4) Input 4	
Input 5 (5)	● ●	(6) Input 6	
Input 7 (7)	● ●	(8) Input 8	
Input 9 (9)	● ●	(10) Input 10	
Input 11 (11)	● ●	(12) Input 12	
Input 13 (13)	● ●	(14) Input 14	
Input 15 (15)	● ●	(16) Input 16	
GND (17)	● ●	(18) GND	
Vout_5V (19)	● ●	(20) Vout_12V	

Descriptions	Signal Type	Remark
Input 1 ~ 16	TTL Input	$+2V < V_{IH} < +5V$ 、 $V_{IL} < +0.8V$
+5V	PC Power +5V Output	
+12V	PC Power +12V Output	
GND	PC Power 0V	

Note : V_{IH} : High Level Input Voltage

V_{IL} : Low Level Input Voltage

JF8 : 20Pin Box				JF7 : 20Pin Box			
Output 1 (1)	■ ●	(2) Output 2		Output 17 (1)	■ ●	(2) Output 18	
Output 3 (3)	● ●	(4) Output 4		Output 19 (3)	● ●	(4) Output 20	
Output 5 (5)	● ●	(6) Output 6		Output 21 (5)	● ●	(6) Output 22	
Output 7 (7)	● ●	(8) Output 8		Output 23 (7)	● ●	(8) Output 24	
Output 9 (9)	● ●	(10) Output 10		Output 25 (9)	● ●	(10) Output 26	
Output 11 (11)	● ●	(12) Output 12		Output 27 (11)	● ●	(12) Output 28	
Output 13 (13)	● ●	(14) Output 14		Output 29 (13)	● ●	(14) Output 30	
Output 15 (15)	● ●	(16) Output 16		Output 31 (15)	● ●	(16) Output 32	
GND (17)	● ●	(18) GND		GND (17)	● ●	(18) GND	
Vout_5V (19)	● ●	(20) Vout_12V		Vout_5V (19)	● ●	(20) Vout_12V	


Descriptions	Signal Type	Remark
Output 1 ~ 32	TTL Output	$V_{OH} : 5V$ 、 $I_{max} : 35mA$
Vout_5V	PC Power +5V Output	
Vout_12V	PC Power +12V Output	
GND	PC Power 0V	

Note : V_{OH} : High Level Output Voltage (No Resistive load)

I_{max} : Maximum Output Current

JF10 : 6Pin Wafer			
			
Pin	Descriptions	Signal Type	Remark
1	GND	PC Power 0V	
2 ~ 5	D2 ~ D5	TTL Output	$V_{OH} : 5V$ 、 $I_{max} : 35mA$
6	GND	PC Power 0V	

Note : ([Appendix2 : LED Status](#))

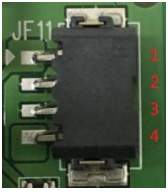JF11 : 4Pin Wafer		
	Pin	Descriptions
	1	Input +5V
	4	Input +12V
	2 、 3	0V

Note : PMC6 V3 has been removed.


3. Installation and Cable Connection

3-1 PMC6 Installation


Before install PMC6 board to computer, must make sure PC power has been cut off. It is safer to cut off PC power supply by turning switch to OFF, or remove power cable temporarily. After confirm there is no power on motherboard, then insert PMC6 into suitable PCIe slot (All of PCIe 1X, 4X, 8X, 16X are compatible), and wire J11 extension power port from an usable USB3.0 port, then start up the computer.

P.S.: If lack of wiring JF11, although marking software can execute normally, there is no signal output from port, and user will get “Stop signal is activated” message when marking dialog is opened.


P.S.: PMC6 V3 has been removed.

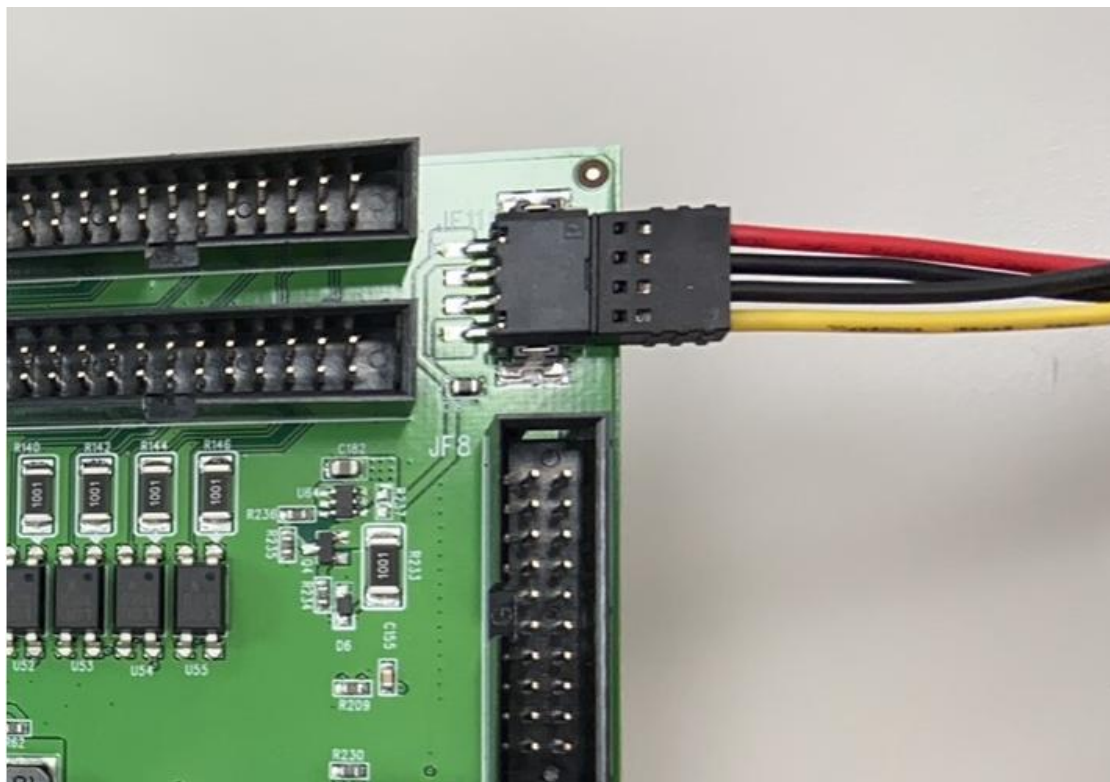

- If PMC6 is installed normal, as the picture below, the device “PMC6 Drivers” will appear within WINDOWS Device Manager.

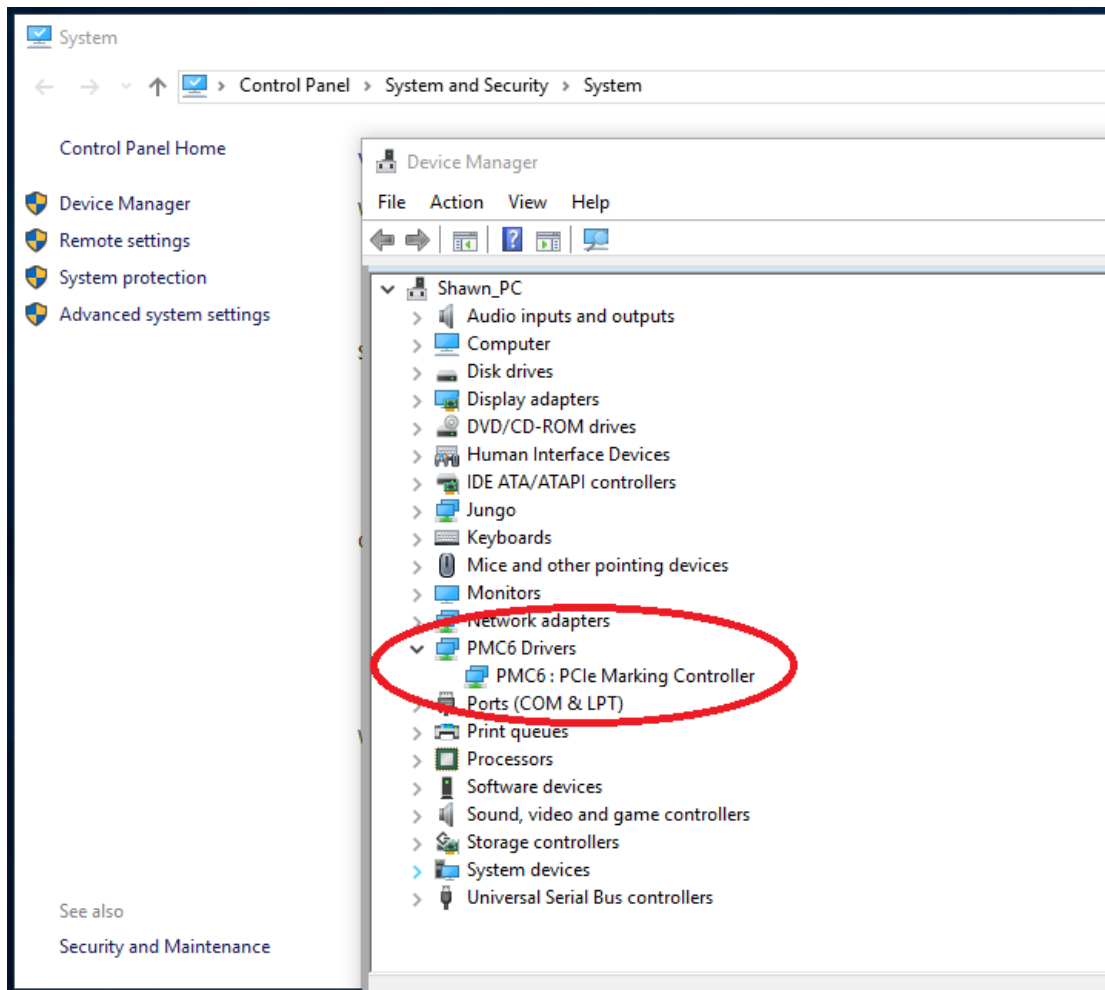


- If PMC6 is installed abnormal, as the picture below, PMC6 will be shown as “Other devices”.
In this case, user has to execute C:\Program Files (x86)\Marking Mate\Drivers\PMC6\Setup.exe to install proper driver.

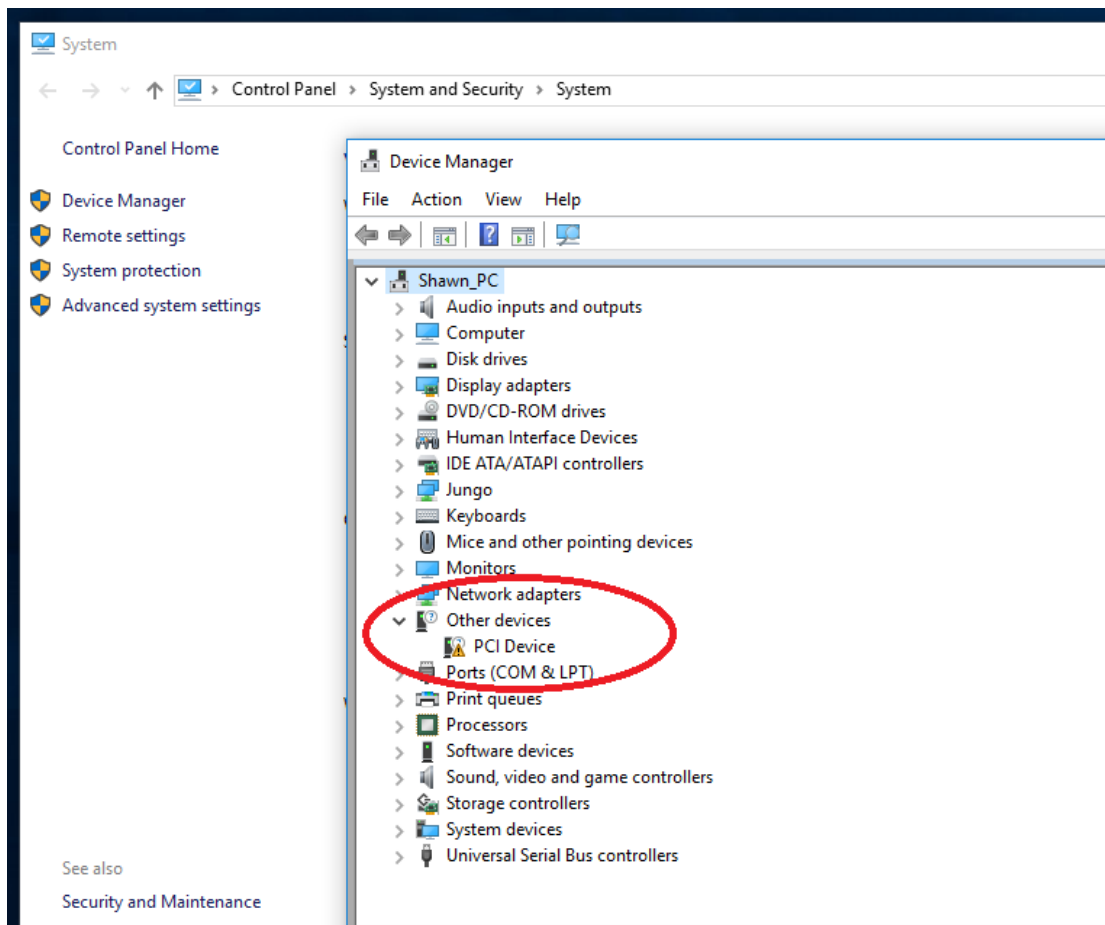

3-2 Cable


3-2-1 Differential

The differential signal should use a shielded twisted pair cable to wire. Positive signal and Negative signal should use the same pair.

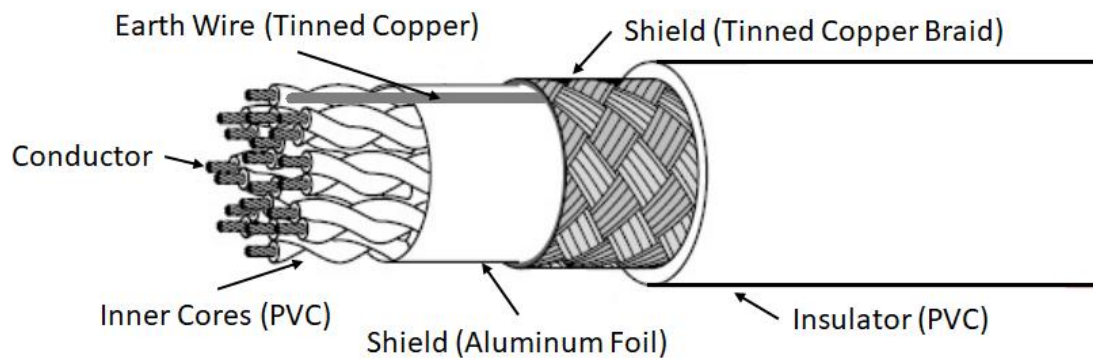

3-2-2 Others

The cable should choose a shielded wire, and there should be tinned copper braid between insulator and inner cores.

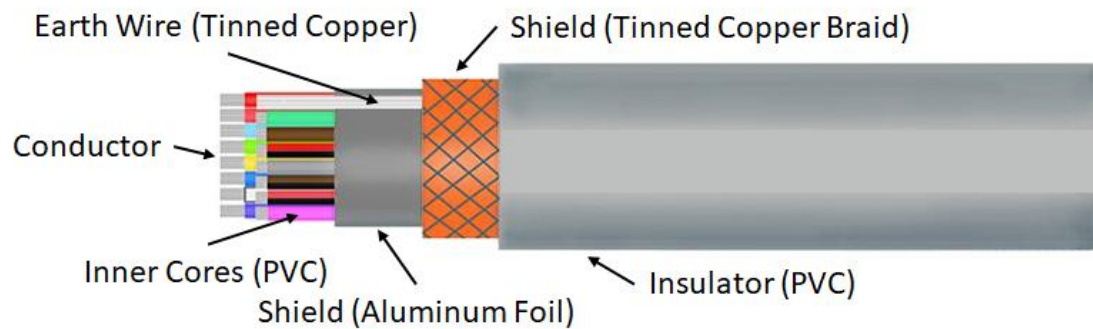


3-3 D-SUB welding

While welding D-SUB connector, should take care the protection of core, and the earth GND wiring.



The cover of D-SUB is recommended in metal material.

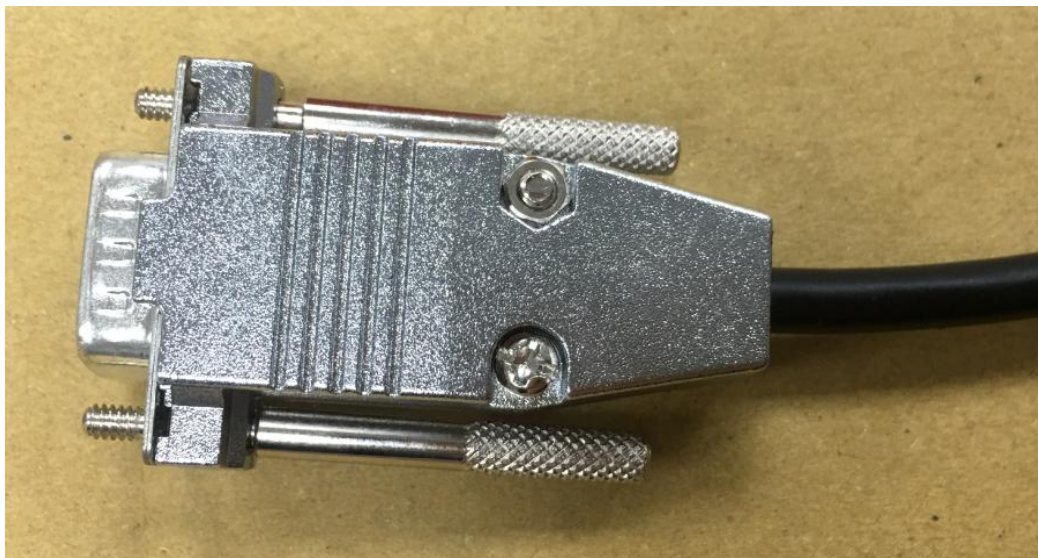


3-4 Adaptor cable

For JF1~JF9 connector could use dual row box header inter-wire to D-SUB connector by a ribbon cable. The D-SUB connector should be fixed on the rear PC case panel by a screw.

You can use DuPont head for more complex wiring. Please refer to Appendix 3 for adaptor cable products.

Note:


- Do not extend the ribbon cable to exceed outside the PC case. This will cause receiving the noise signal easily.

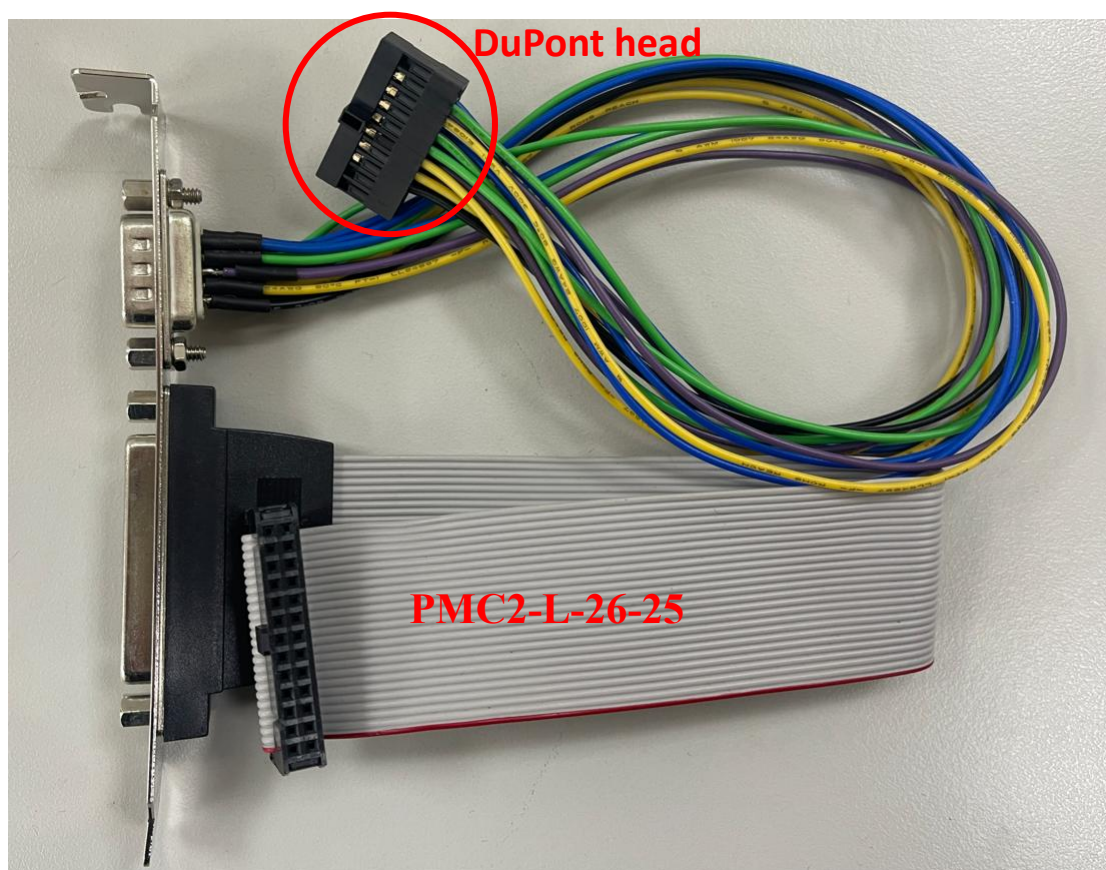


3-5 Scanner Cable Connection

3-5-1 XY2-100 16Bit Scanner

- Type 1 XY2-100 16Bit : With one D-SUB 25Pin

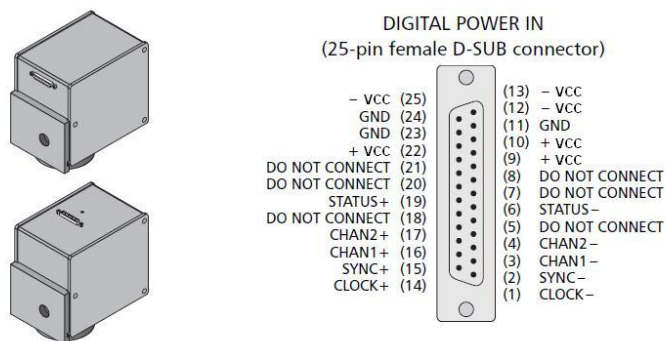

- Type 2 XY2-100 16Bit : With D-SUB 25Pin and D-SUB 9Pin

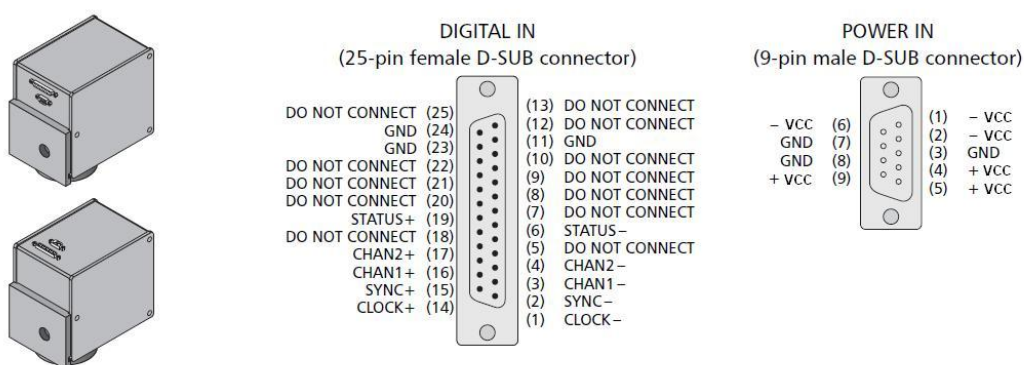


Notice:

- PMC6 P1 is corresponding to digital ScanHead D-SUB25Pin. User could easily connect them by 25-pin pin to pin cable; however, if using type 1 ScanHead, user has to wire to power source from the cable.
- For the power source: User has to wire all pins of them, which means has to wire 3 pins of the +VCC, 3 pins of the -VCC, and 3 pins of the GND. Only wire to 1 pin of +VCC, 1 pin of -VCC, or 1 pin of GND is forbidden.
- Power GND should short to PMC6 GND.
- Max cable length is 5M. Cable should cover with shield and isolated.


3-5-2 Raylase XY2-100-E 18Bit Scanner

Wire is similar to XY2-100 16Bit scanner, except add additional 2 Status signal.

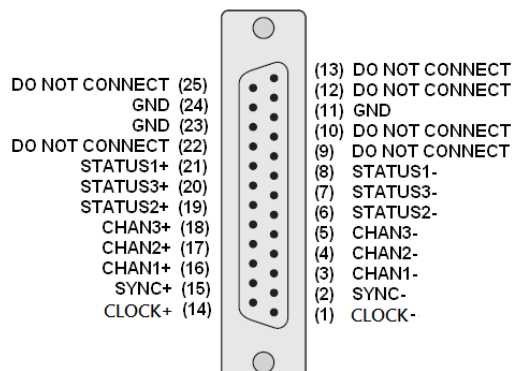


3-5-3 CTI XY2-100 20Bit Scanner

Wire is same to XY2-100 16Bit scanner.

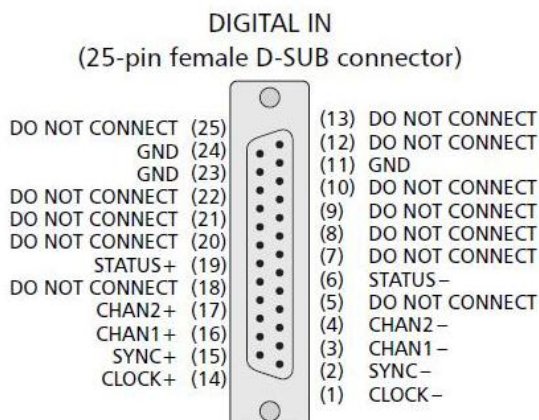

3-5-4 CANON 20Bit / 64Bit Scanner


Wire is same to XY2-100 16Bit scanner.

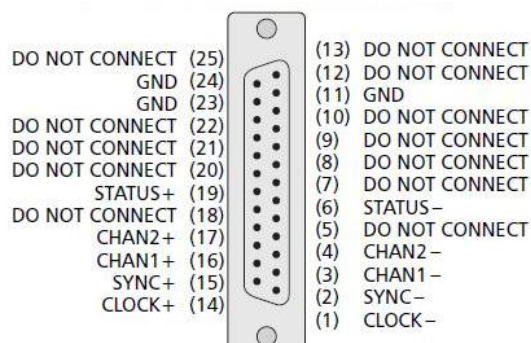


Notice :

- 20Bit Scanner setting : Parameter ID = 67 (20) 、 Parameter ID = 68 (0)
- 64Bit Scanner setting : Parameter ID = 65 (5) 、 Parameter ID = 66 (5) 、 Parameter ID = 67 (20) 、 Parameter ID = 68 (0)

3-5-5 ME-Link Scanner

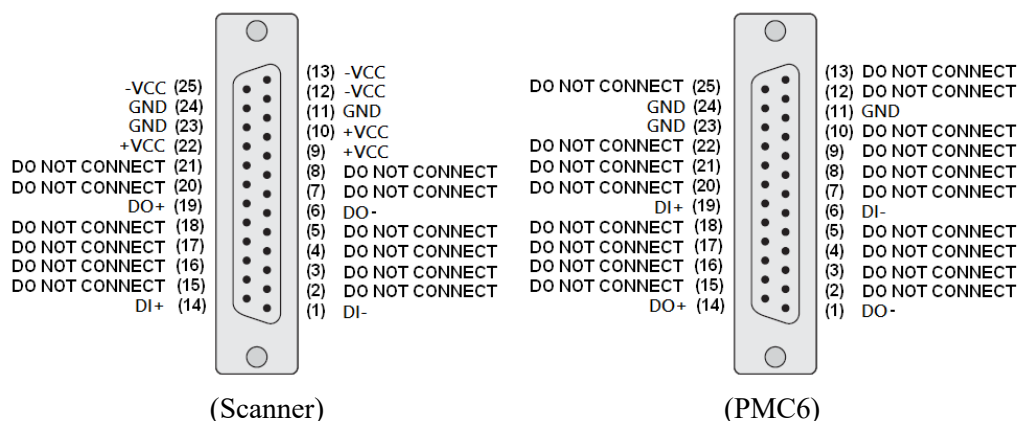

3-5-6 SL2-100 20Bit Scanner

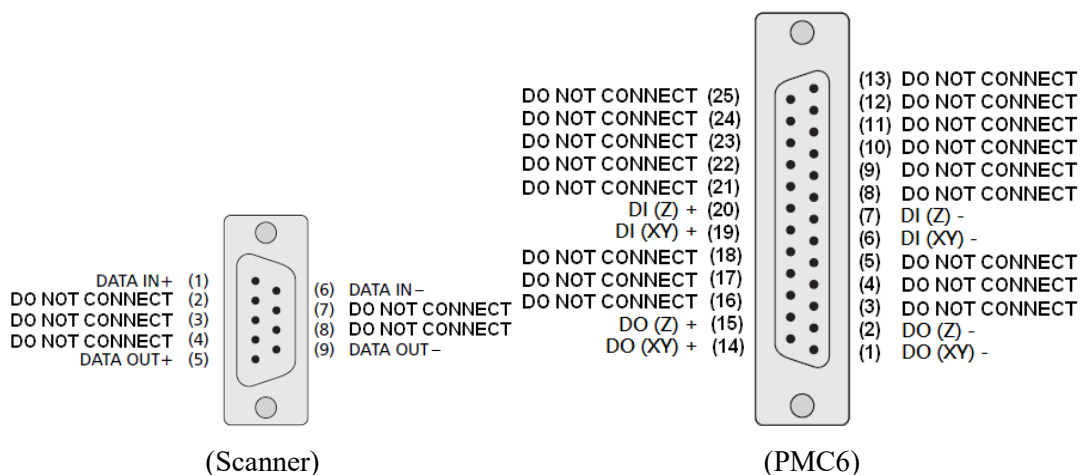

SL2-100 D-SUB 9F		PMC6 P1 D-SUB 25F	
Description	Pin	Description	Pin
DATA IN+	1	DO (XY) + / DO (Z) +	14 / 15
DATA IN-	6	DO (XY) - / DO (Z) -	1 / 2
DATA OUT+	5	DI (XY) + / DI (Z) +	19 / 20
DATA OUT-	9	DI (XY) - / DI (Z) -	6 / 7


Notice :

- Scanner GND should not short to PMC6 GND. Otherwise scanner will keep stasis.

3-6 Stepper / Servo Motor Servo Cable Connection


According to the Differential types of Motor Driver, there are three ways of connection between Motor Driver and PMC6's JF3 and JF4 connectors.

3-6-1 Differential Signal

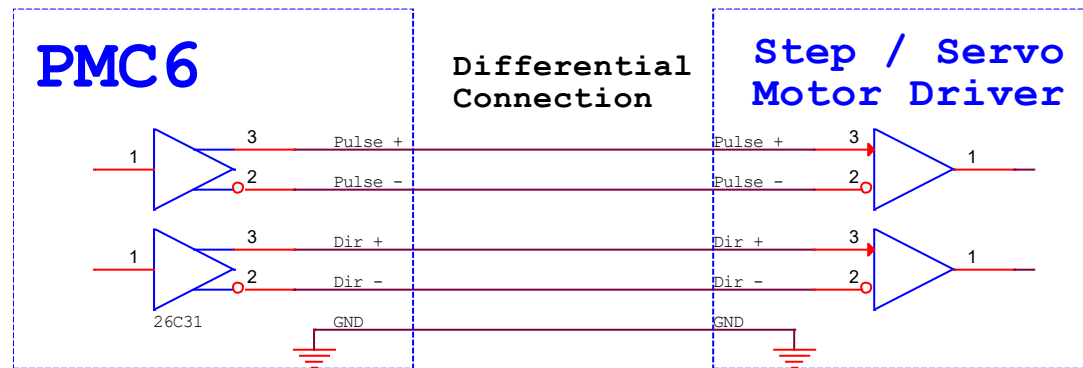


Note : Motor Servo GND should short to PMC6 GND.

3-6-2 Common Anode

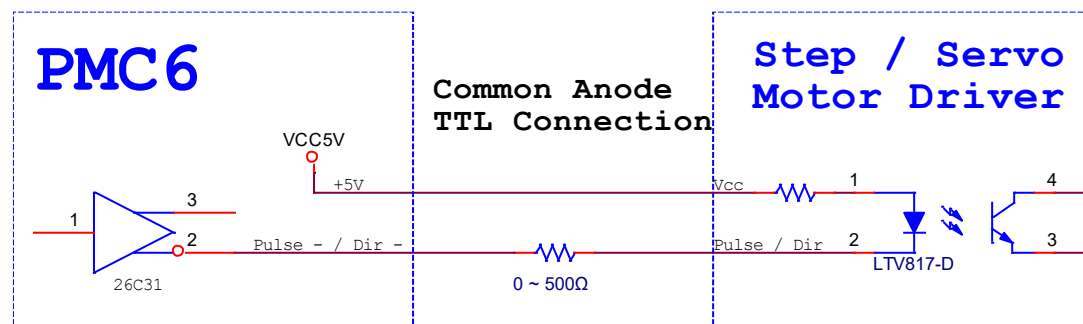


3-6-3 Common Cathode

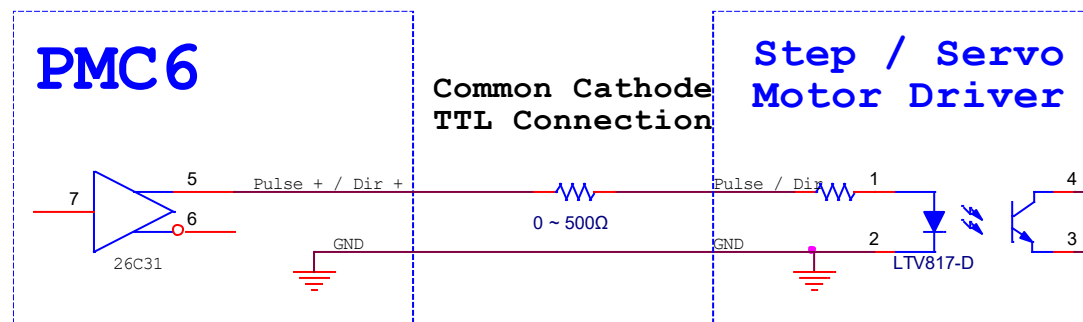


3-7 Sensor Connection


3-7-1 Common Cathode Sensor (NPN)

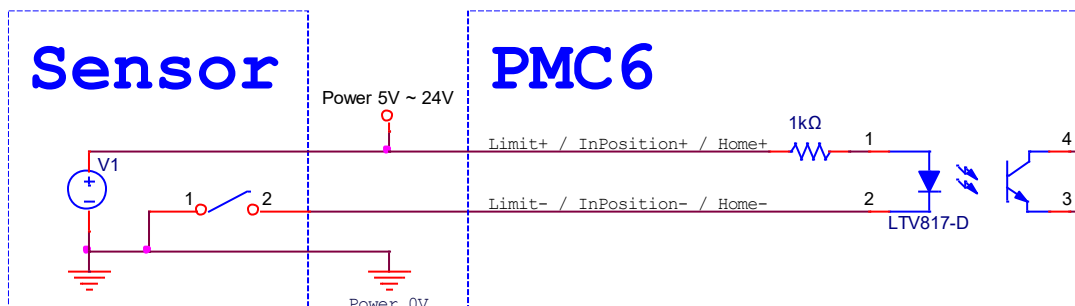

3-7-2 Common Anode Sensor (PNP)

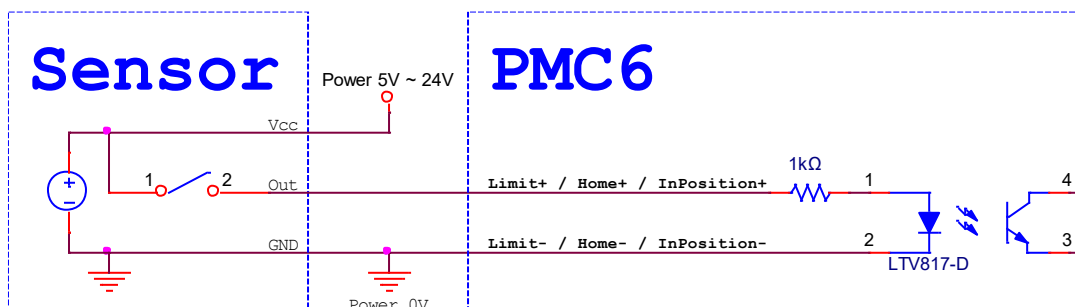


3-8 Optical coupler Connection

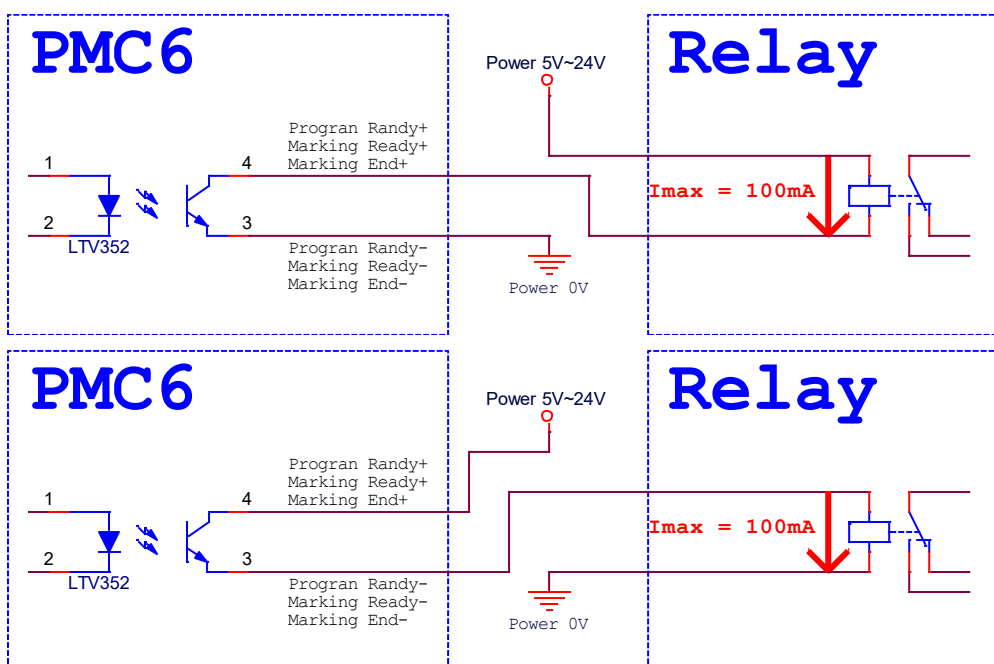

3-9 START and STOP Connection


3-9-1 Button

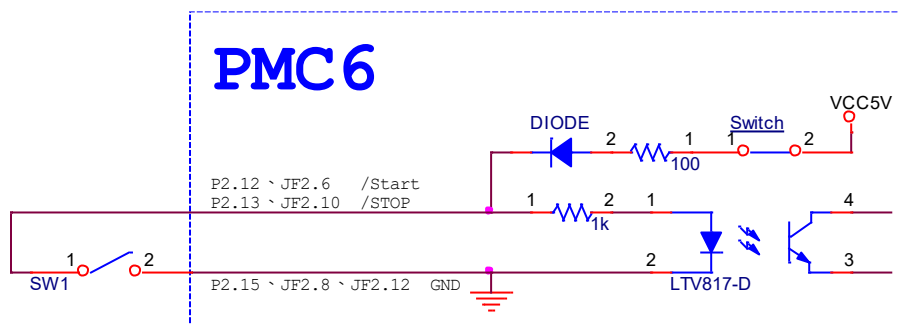

Note : Please set Common Cathode, Please refer to [3-12 HWConfig Setting Description](#).


3-9-2 Sensor

- Common Cathode (NPN)

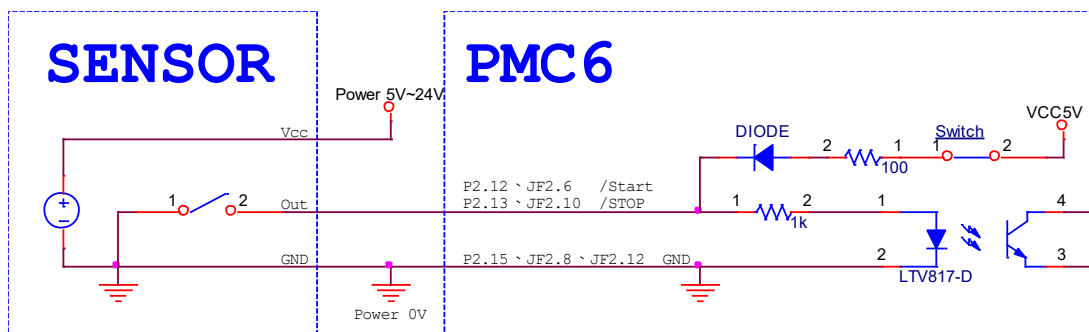


Note : Please set Common Cathode, Please refer to [3-12 HWConfig Setting Description](#).

- Common Anode (PNP)

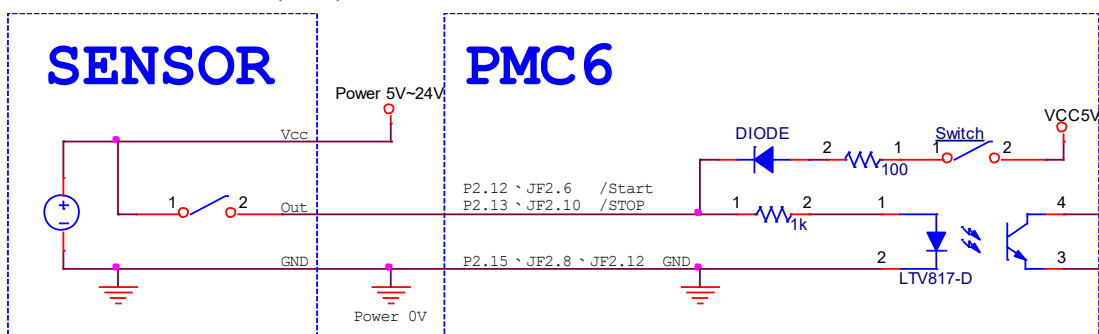


Note : Please set Common Anode, Please refer to [3-12 HWConfig Setting Description](#).

3-9-3 TTL Signal

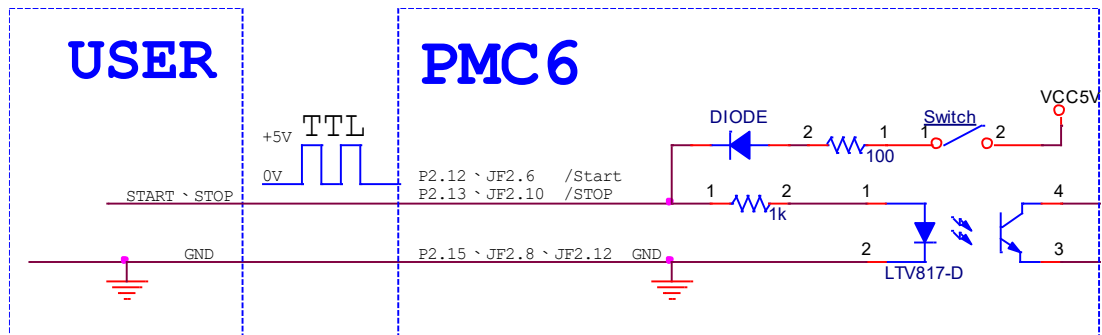

Note : Please set Common Anode · Please refer to [3-12 HWConfig Setting Description](#).

3-10 Encoder Signal

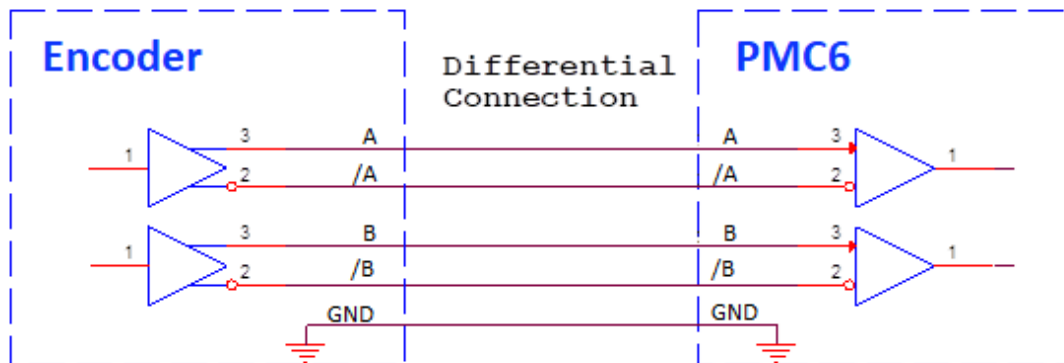


Note : Encoder GND should short to PMC6 GND.


3-11 TTL Connection

3-11-1 TTL Input




- TTL

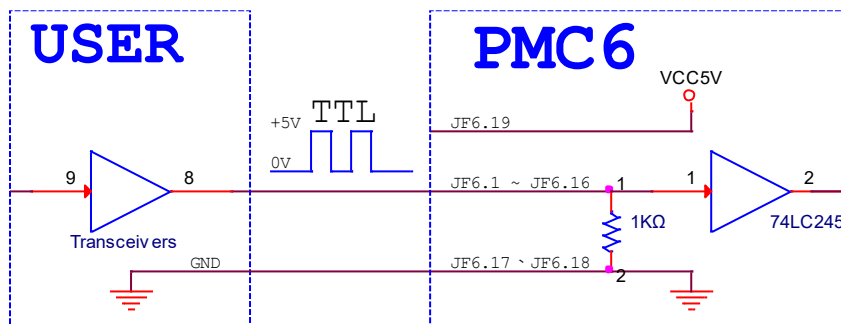

- Switch

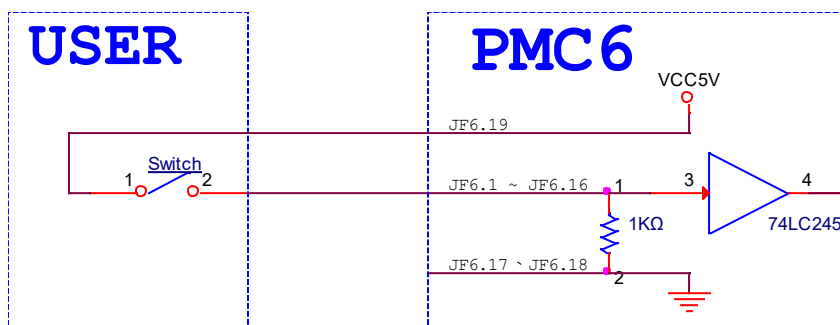


- Optical coupling

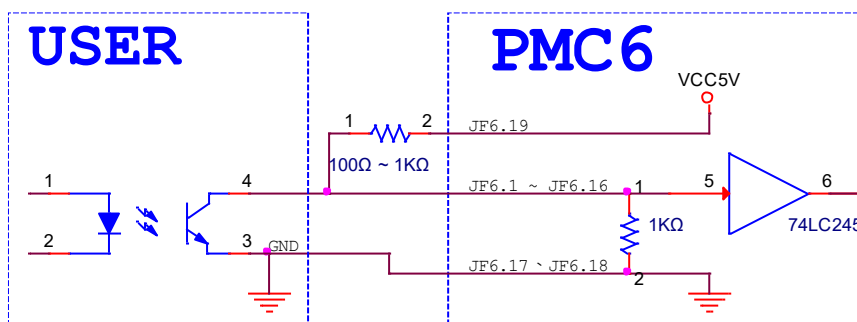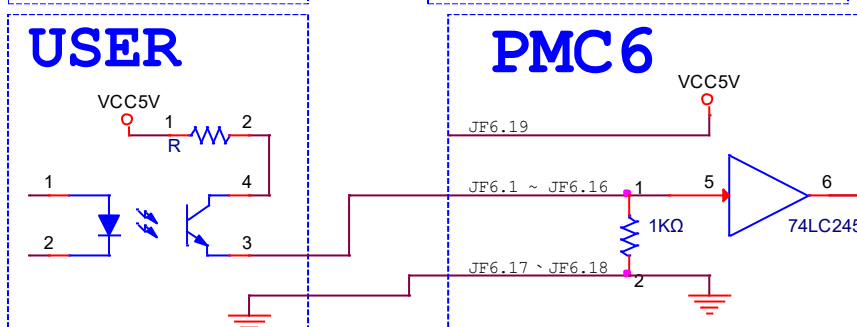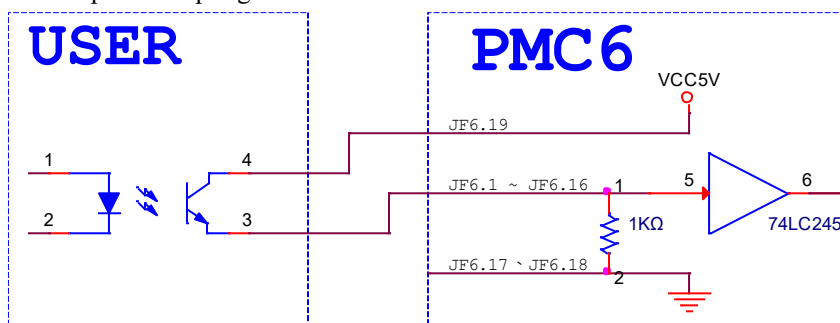


3-11-2 TTL Output

The maximum output current is 35mA. If not enough, Need to add a current amplifier.
(BJT' Optical coupling' Relay' Module...)


- TTL

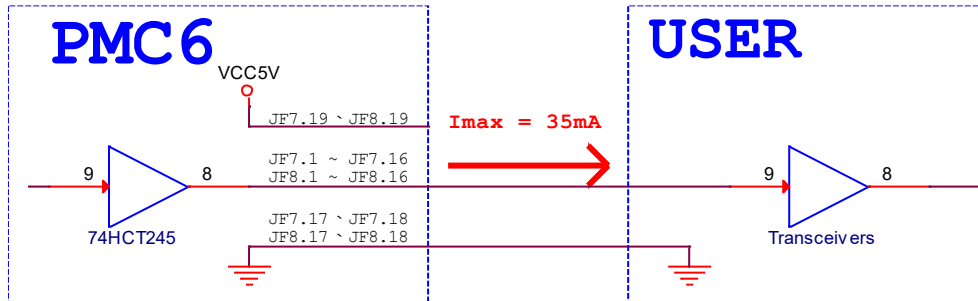

- Optical coupling

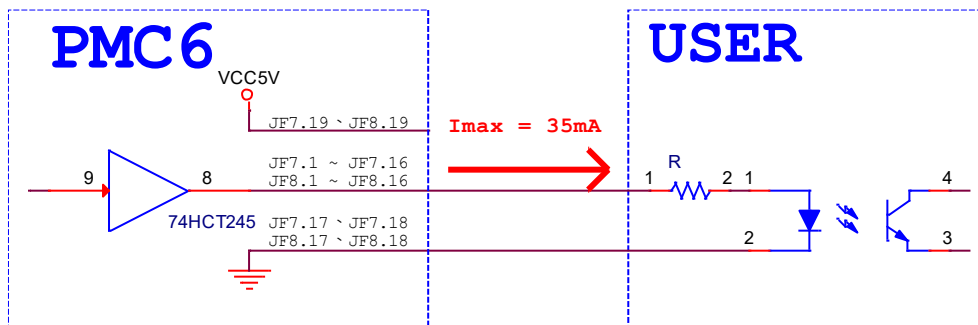

- Relay

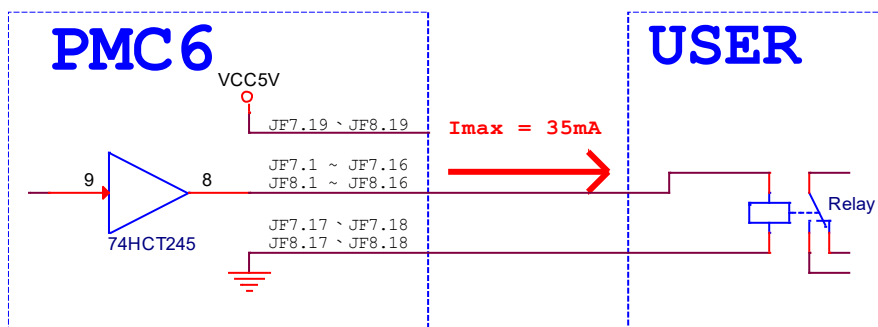

3-12 HWConfig Setting Description

File Address : C:\Program Files\Marking Mate\Drivers\PMC6\HWConfig.exe

HWConfig PMC6

Card Select: 1

Scanner Type: XY2-100 16Bit

Scanner alignment

☐ XY1 Lines Exchange

☐ XY2 Lines Exchange

Start / Stop Type

Start ☒ common cathode ☐ common anode

Stop ☒ common cathode ☐ common anode

Analog Setting

AOUT1 ☒ 0 ~ 10V ☐ 0 ~ 5V

AOUT2 ☒ 0 ~ 10V ☐ 0 ~ 5V

Motion Setting

R ☒ P/D ☐ CW/CCW

X ☒ P/D ☐ CW/CCW

Y ☒ P/D ☐ CW/CCW

Z ☒ P/D ☐ CW/CCW

Analog Test

DAC1: 100 %

DAC2: 100 %

Test

Analog Scale Table (0 - 65535)

	DAC1	DAC2
0 %	0	0
10 %	5957	5957
20 %	11915	11915
30 %	17873	17873
40 %	23830	23830
50 %	29788	29788
60 %	35746	35746
70 %	41704	41704
80 %	47661	47661
90 %	53619	53619
100 %	59577	59577

Signal Setting (0 / 1)

☐ Start Signal Reverse

☐ Stop Signal Reverse

☐ LaserON Signal Reverse

☐ PWM Signal Reverse

☐ FPK Signal Reverse

☐ Program Ready Signal Reverse

☐ Marking Ready Signal Reverse

☐ Marking End Signal Reverse

Extension

☐ Enable Multi Start

Card ID Define

Number (0 ~ 3): 0

Information

Hardware Flag: ff ff ff ff

Hardware Version: 00020103

Write Format Exit

3-12-1 Scanner Type

Set P1、JF1 Scanner Type


- **XY2-100 16Bit** : Typical digital signal for most of scanner on market.
- **Raylase XY2-100-E 18Bit** : Raylase SS-III Communication specifications.
- **CTI XY2-100 20Bit** : CTI XY2-100 Protocol 20Bit Communication specifications.
- **Canon 20Bit** : Canon scanner setting : Parameter ID = 67 (20)、Parameter ID = 68 (0)
- **Canon 64Bit** : Canon scanner setting : Parameter ID = 65 (5)、Parameter ID = 66 (5)、Parameter ID = 67 (20)、Parameter ID = 68 (0).
- **ME-Link** : Need to unlock the function.
- **SL2-100 20Bit** : Need to unlock the function.

3-12-2 Scanner alignment


Exchanging X and Y line will affect correction file.

3-12-3 Start / Stop Type

- **Common Cathode** : Figure Switch Close, /Start 、 /Stop Active Low.

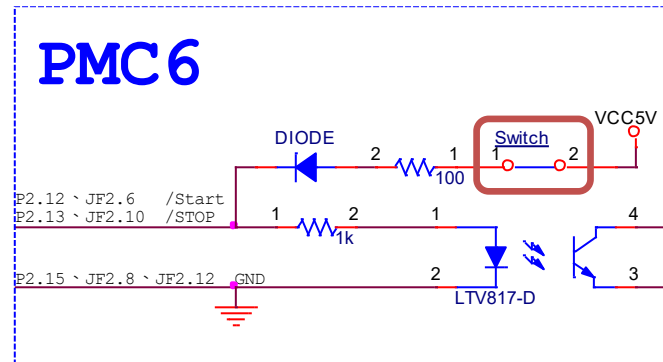

- **Common Anode** : Figure Switch Open, Start 、 Stop Active High.

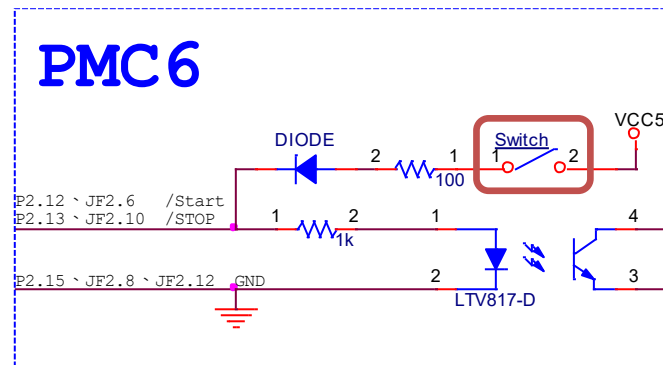

3-12-4 Extension

- **Enable Multi Start** : While in automation mode, multiple starting marking signal trigger is allowed.

3-12-5 Motion Setting

- **Pulse Direction / CW CCW** : Select Motion output Pulse/Dir or CW/CCW.

3-12-6 DAC Setting

Select DAC1& DAC2 as 0~5V or 0~10V.

3-12-7 DAC Scale Table

Fine tune Analog1 and Analog2 output voltage.(0 ~ 65535 ≒ 0V ~ 11V)

#When press Format, the value will be set as default.

3-12-8 DAC Test

Make test Analog1 and Analog2 easier when adjust Analog Scale Table. When pressing Test, Analog1 and Analog2 will change to corresponding voltage.

3-12-9 Signal Setting

Enable Active Low.

3-12-10 Card ID Define

Setting card ID (For multi-card use).

3-12-11 Information

PMC6 related information.

3-12-12 Button

- **Write** : Click to reply any setting change.
- **Format** : Return every setting to default.
- **Exit** : Exit HWConfig.

4. SPI Laser Settings

4-1 Program Settings

If you want to use MarkingMate software to control SPI Laser, you have two ways to make it.

4-1-1 Software control interface


We recommend user to use software control mode to control SPI fiber laser by PMC6. By this mode user only have to connect to laser Break Out Board(BOB) by RS-232 cable and Gate signal.


The RS-232 port located on BOB which is needed to connect to COM port located on PC. If there is no such a COM port on PC, user could use a “USB to COM port convertor” to help.

#Wiring please refer to [\(4-2 Pin Assignment\)](#).

After wiring is completed, user have to set cfg file to SPI_Fiberg by \markingmate\DM.exe and edit “COMPORT = (the current COM port you are using)” within SPI_Fiber.cfg by any text editor.

Please refer to the following picture and cfg list:

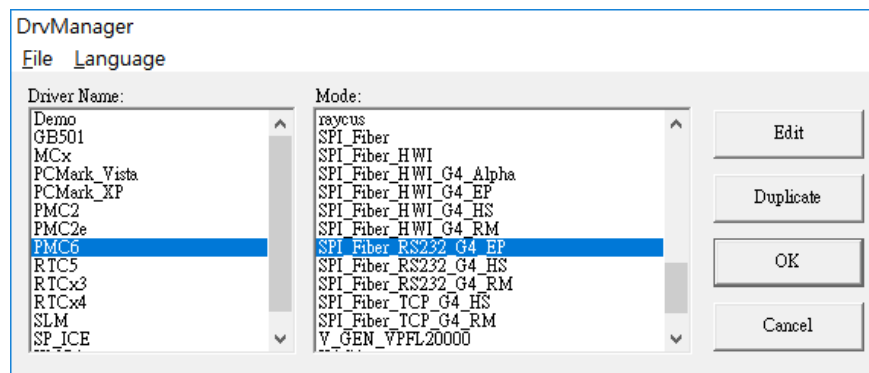

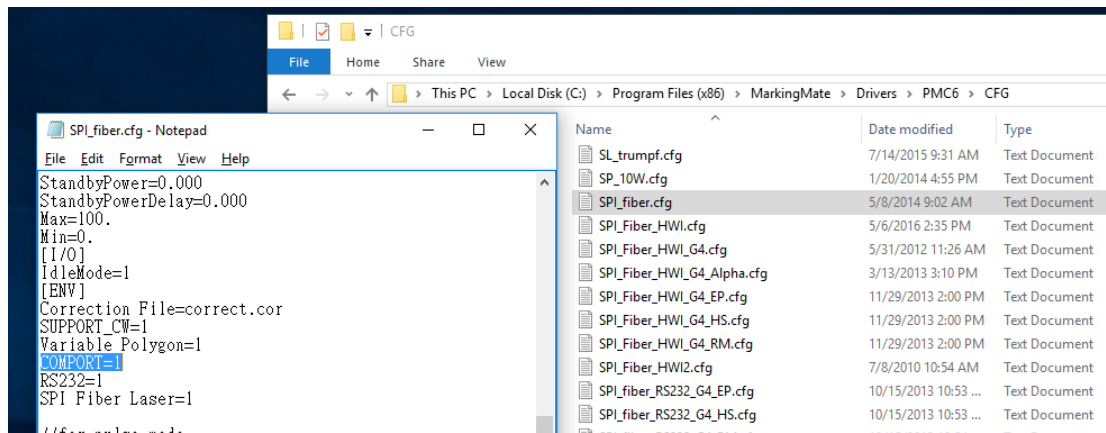


4-1-2 Hardware control interface

If user has to pursue highest performance for laser control, definitely have to use hardware control mode. Please refer to the following ([4-2 Pin Assignment](#)) for wiring.

After wiring is completed, user have to set cfg file to SPI_Fiber_HWI.cfg or other suitable cfg by \markingmate\DM.exe.

Please refer to the following picture and cfg list:

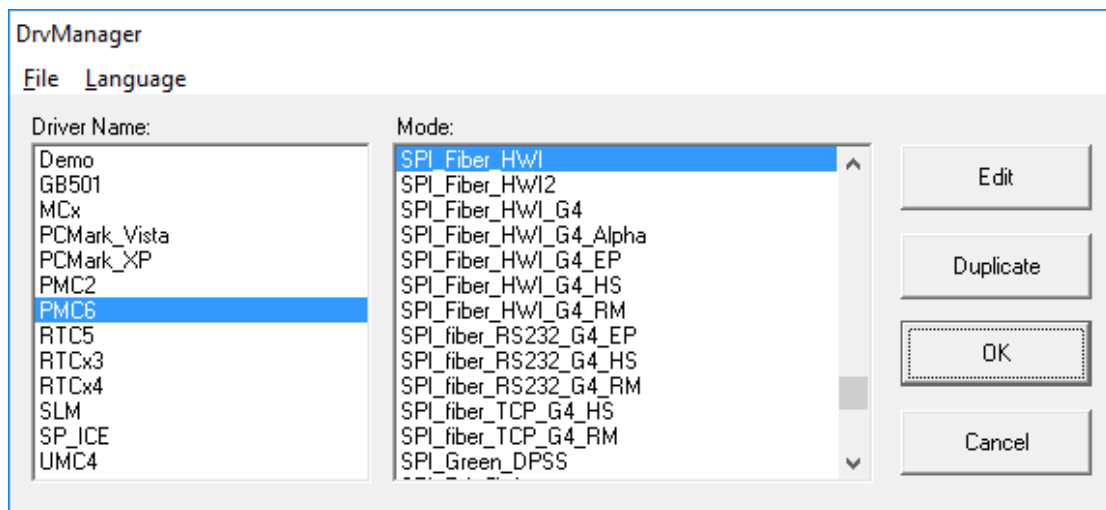

4-2 Pin Assignment

4-2-1 Software control interface (RS232)

When you choose the driver of “SPI_Fiber.cfg”, the pin assignments of PMC6 and SPI G3 Laser are as below :

PMC6 - P2 : HD-SUB 15F		SPI G3 / G4 (SCSI 68-pin)		SPI break-out board		
Pin	Descriptions	Signal name		Pin	Board description	Pin
6	Laser On/Off	G3	Laser Emission Gate	5	USER_LASER_OUT_EN_H	J7 Pin1
		G4	Laser_emission_gate_h			
15	GND	G3	Laser emission gate low input	39	USER_LASER_OUT_EN_L	J7 Pin2
		G4	Laser_emission_gate_l			

PC-RS232 Port : D-SUB 9M		SPI G3 / G4 (SCSI 68-pin)		SPI break-out board	
Pin	Descriptions	Signal name	Pin	Board description	Pin
2	RX	RS-232_TX	25	User RX RS232	J3 Pin2
3	TX	RS-232_RX	26	User TX RS232	J3 Pin3
5	GND	Ground RS	59 、 60	0V RS232	J3 Pin5

4-2-2 Hardware control interface (HWI)

When you choose the driver of “SPI_Fiber_HWT”, the pin assignments of PMC6 and SPI G3 laser will be as below:

PMC6 - JF2 : 26Pin Box		SPI G3 / G4 (SCSI 68Pin)			SPI break-out board	
Pin	Descriptions	Signal name		Pin	Board description	Pin
1	Analog Out1	G3	Power amplifier active-state current set point	65	USER_PWR_MOD_IN	J6 Pin7
		G4	Al_1 – ext power control			
3	Analog Out2	G3	Power-amplifier simmer current set point	64	USER_PWR_BIAS_IN	J6 Pin6
		G4	Al_2 – ext simmer control			
5	PWM	G3	External Pulse Trigger	13	USER_EXT_TRIG_H	J7 Pin7
		G4	Pulse_trigger_h			
9	Laser On/Off	G3	Laser Emission Gate	5	USER_LASER_OUT_EN_H	J7 Pin1
		G4	Laser_emission_gate_h			
2、4、25	GND	G3	GND_AN	28、29、30、31、32、33	0V_Analogue	J6 Pin1
		G4	GND_A			
		G3	Unused			
		G4	GND_A	27	USER_EXT_TRIG_L	J7 Pin8
		G3	External Pulse Trigger low input			
		G4	Pulse_trigger_ext_l	47	USER_EXT_TRIG_L	J7 Pin8
		G3	Laser emission gate low input			
		G4	Laser_emission_gate_l	39	USER_LASER_OUT_EN_L	J7 Pin2

PMC6 - JF7 : 20Pin Box		SPI G3 / G4 (SCSI 68Pin)		SPI break-out board	
Pin	Descriptions	Signal name		Pin	Board description
6	Output 22	G3	Pulsed / CW Mode select	21	USER_PULSE_N_CW_H
		G4	Laser_Pulse_CW_h		
7	Output 23	G3	Globe Enable	7	USER_GLOBAL_EN_H
		G4	Laser_enable_h		
8	Output 24	G3	Alignment laser enable	6	USER_PT_LASER_EN_H
		G4	Pilot_laser_enable_h		
9	Output 25	G3	State Select: bit 0	17	USER_CFG_0
		G4	DI_0		
10	Output 26	G3	State Select: bit 1	18	USER_CFG_1
		G4	DI_1		
11	Output 27	G3	State Select: bit 2	19	USER_CFG_2
		G4	DI_2		
12	Output 28	G3	State Select: bit 3	20	USER_CFG_3
		G4	DI_3		
13	Output 29	G3	State Select: bit 4	51	USER_CFG_4
		G4	DI_4		
14	Output 30	G3	State Select: bit 5	52	USER_CFG_5
		G4	DI_5		
17、18	GND	G3	Pulsed / CW Mode select low	55	USER_PULSE_N_CW_L
		G4	Laser_Pulse_CW_l		
		G3	Global enable low input	41	USER_GLOBAL_EN_L
		G4	Laser_enable_l		
		G3	Alignment laser enable low input	40	USER_PT_LASER_EN_L
		G4	Pilot_laser_enable_l		
		G3	GND_ISOD	58	0V_ISO_D
		G4	GND_D		
		G3	0V Supply for fast output opto-couplers		
		G4	GND_D		
		G3	GND_RS		
		G4	GND		


PMC6 - JF6 : 20Pin Box		SPI G3 / G4 (SCSI 68Pin)		SPI break-out board	
Pin	Descriptions	Signal name		Pin	Board description
9	Input 9	G3	Seed laser fire indicator	3	User_seed_fire
		G4	Monitor		
10	Input 10	G3	Pre-amplifier current fault	9	User_pre_amp_over_cur_n
		G4	Alarm		
11	Input 11	G3	Base plate temperature fault	8	User_base_temp_fault_n
		G4	Laser_temperature		
12	Input 12	G3	Beam collimator fault	11	User_bdo_fault_n
		G4	Beam_delivery		
13	Input 13	G3	Power-amplifier current fault	10	User_drv_pwr_mon_n
		G4	System_fault		
14	Input 14	G3	Reserved fault indicator	12	User_seed_temp_fault_n
		G4	Laser_deactivated		
15	Input 15	G3	Power Supply Fault	16	User_pwr_amp_over_cur_n
		G4	Laser_emission_warning		
16	Input 16	G3	Laser Ready (no fault)	14	User_laser_ready
		G4	Laser_is_on		
17、18	GND	G3	Unused	34	0V_ISO_D
		G4	GND		

5. IPG Laser Settings

5-1 Program Settings (Also apply for Raycus and JPT Laser)

If you want to use MarkingMate software to control IPG Laser, you have to do the right program settings first, please follow the below steps.

Execute the program DM.exe under the directory of C:\Program Files\MarkingMate, a dialogue box will be displayed as below. Choose the PMC6 of Driver Name and choose the suitable cfg according to the following table, and then click “OK” button.

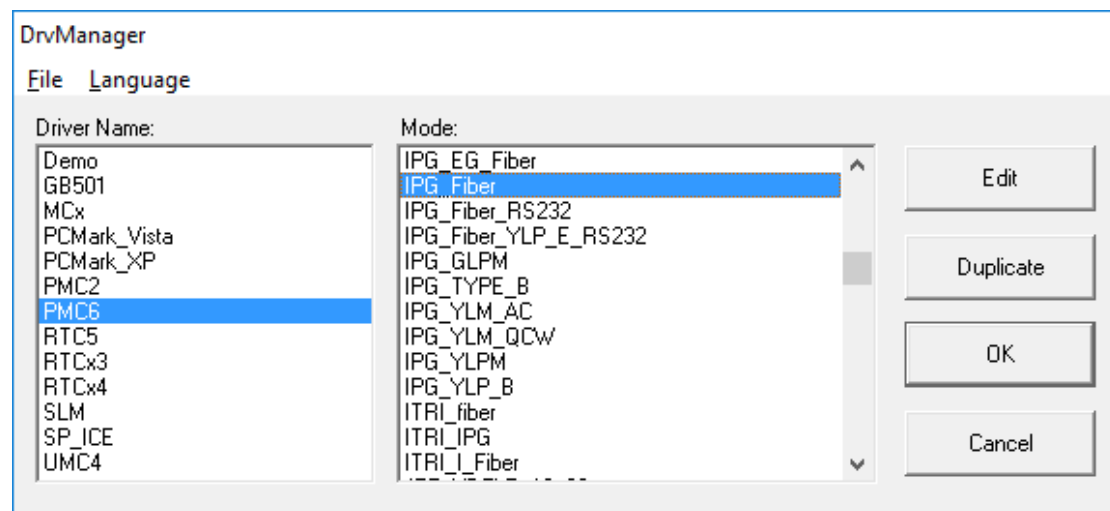

5-2 Pin Assignment

PMC6 - JF2 : 26Pin Box		IPG : D-SUB 25Pin	
Pin	Descriptions	Signal name	Pin
5	PWM Output	Pulse Repetition Rate Input	20
9	Laser On/off	Laser Modulation Input	19
11	Leading Light On/Off	[Note 1] Guide Light On/Off	22
21	MO	[Note 2] MO On/Off	18

PMC6 - JF7 : 20Pin Box		IPG : D-SUB 25Pin	
Pin	Descriptions	Signal name	Pin
3	Output 19	[Note 1] Guide Light On/Off	22
4	Output 20	[Note 2] MO On/Off	18
5	Output 21	D0	1
6	Output 22	D1	2
7	Output 23	D2	3
8	Output 24	D3	4
9	Output 25	D4	5
10	Output 26	D5	6
11	Output 27	D6	7
12	Output 28	D7	8
13	Output 29	Latch	9
17、18	GND	Ground	10, 14
19	+5V	EMStop	[Note 3] 17, 23

Note 1 : You can select either JF2 pin 11 or JF7 pin 4 to connect with.

Note 2 : You can select either JF2 pin 6 or JF7 pin 3 to connect with.

Note 3 : In IPG EG Type Pin 17 should open to +5V.


PMC6 - JF6 : 20Pin Box		IPG : D-SUB 25Pin	
Pin	Descriptions	Signal name	Pin
11	Input 11	Refer to IPG Manual	12
12	Input 12	Refer to IPG Manual	16
13	Input 13	Refer to IPG Manual	21
14	Input 14	Refer to IPG Manual	11

6. OMRON Laser Settings

6-1 Program Settings

If you want to use MarkingMate software to control IPG Laser, you have to do the right program settings first, please follow the below steps.

Execute the program DM.exe under the directory of C:\Program Files\MarkingMate, a dialogue box will be displayed as below. Choose the PMC6 of Driver Name and choose the suitable cfg according to the following table, and then click “OK” button.

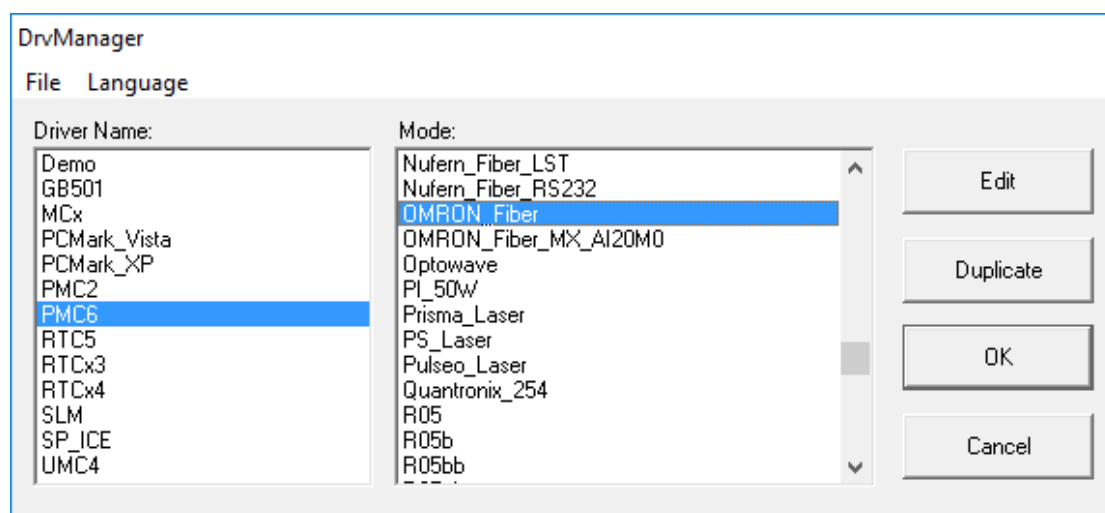

6-2 Pin Assignment

When you choose the driver of “OMRON_Fiber”, the pin assignments of PMC6 and OMRON laser will be as below :

PMC6-P2 : HD-SUB 15M		OMRON I/O Port : D-SUB 15M	
Pin	Descriptions	Pin	Descriptions
6	LASER ON	5	LASER ON H
15	GND	6	LASER ON L
10	LAMP	7	LD ON H
15	GND	8	LD ON L

Note : OMRON RS-232 Serial Port has to connect to RS-232 Port on PC.


7 Using RS-232

7-1 What is RS-232


RS-232 is a kind of serial port. Common type of RS-232 connector is 9 pin D-Sub. Some kinds of laser types needed to control by RS-232 port for tuning laser parameter, such as power percentage, frequency...etc.

7-2 Setting to use RS-232 to control laser

Take SPI G4 HS laser controlled by RS-232 as example. After user has executed \MarkingMate\DM.exe , chosen PMC6 at Driver Name column, and picked SPI_fiber_RS232_G4_HS.cfg at Mode column, to apply the setting by clicking OK. The location of cfg file is \MarkingMate\Drivers\PMC6\cfg\ . Refer to the following picture :

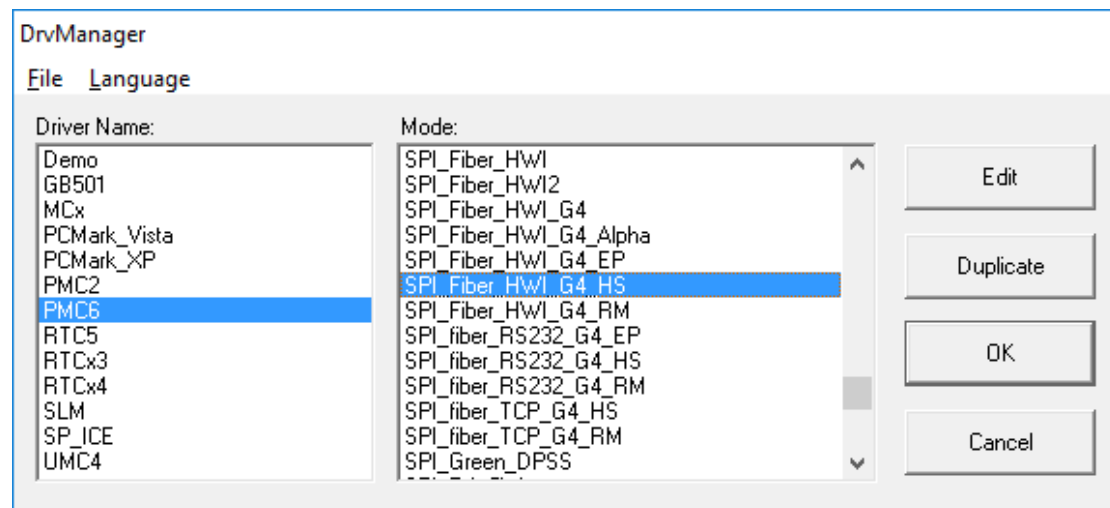


Open the given file by favorite text editor. There should be two instructions under [ENV] sector, such as RS232=1 and COMPORT=XXX. RS232=1 means control laser by RS-232. XXX within COMPORT=XXX means the using Com Port number. Default value is 1 which means using COM port 1 to control laser. Manually change this value to assign other port if necessary.

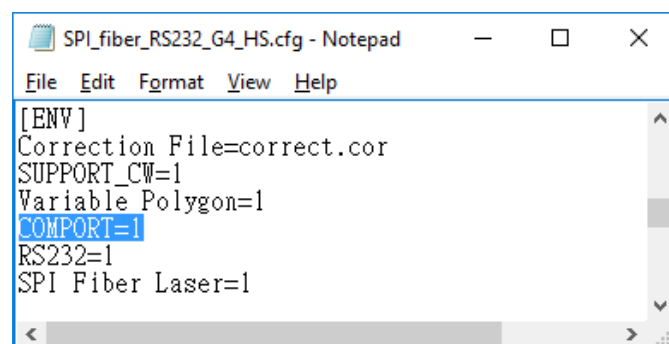


Appendix1 : Various Laser Setting Modes


TYPE 1 : CO2 Mode

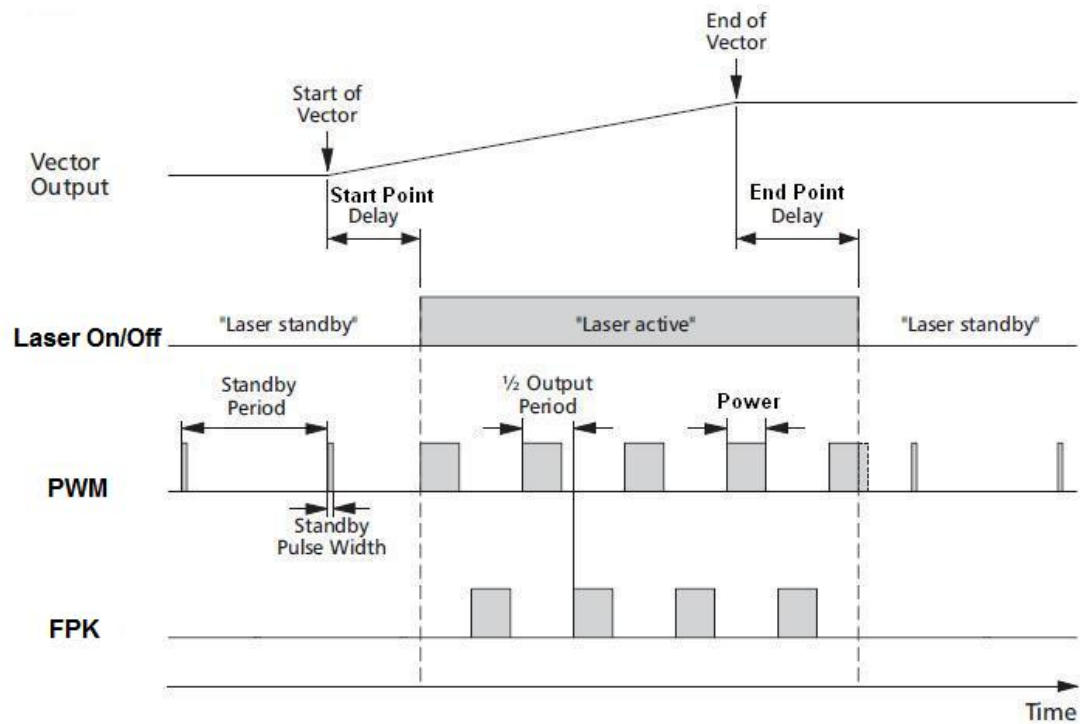

TYPE 2 : YAG 1-3 Mode

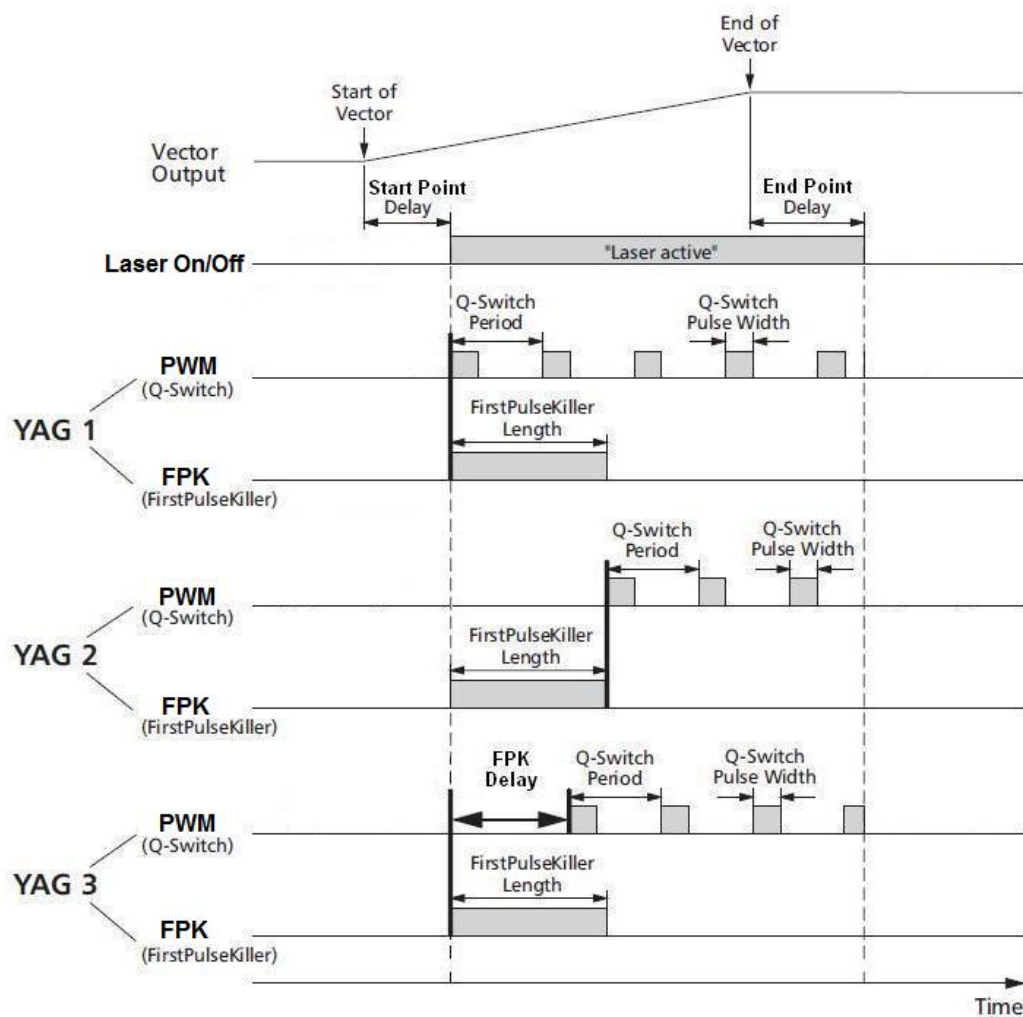

TYPE 3 : R05 Mode

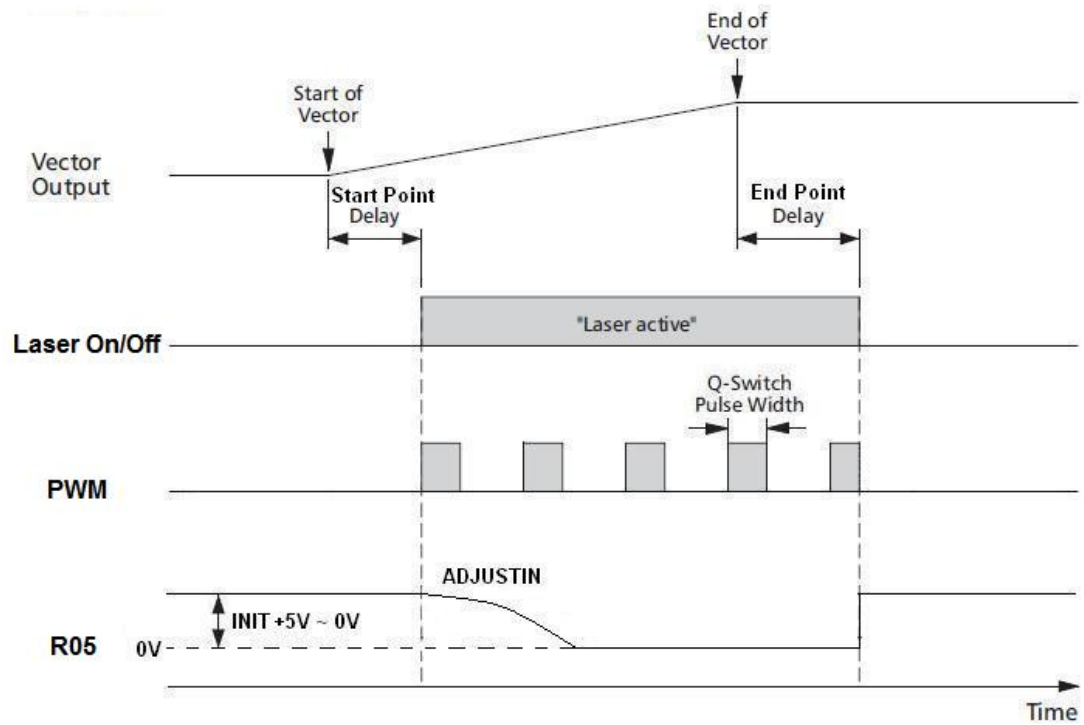

Appendix2 : LED Status

D1: Boot success is bright, boot fail is dark. (Note 1)

D9: Power status. Power level normal is bright.

D2 ~ D5: STATUS

Status	Descript	Note
D2D3 and D4D5 flickering	Boot success but not execute software	Normal
D2 flickering, others darkness	Software opened	Normal
Flickering at the same time	Boot error and enter backup session.	Failure(Note2)
Keep bright or darkness	Boot error.	Failure(Note3)
Shimmer	JF11(4 pin) power supply error	Failure(Note4)

Note1: If D1 is darkness, please contact the product supplier for help.

Note2: Please confirm if device manager has found the control card. If yes, please execute HWUpdate.exe to update. If no, please reboot PC without cutting off power and check again if it is found.

Note3: Please shut down PC first then boot again to confirm if the card goes to normal. If not, please contact the product supplier for help.

Note4: Check if JF11 power supply is normal.

Appendix3 : Adaptor cable products


25-L-XY2-100

XY2-100 Dedicated line, PMC6 、 PMC2e 、 PMC2 、 UMC4 、 EMC6 Universal.



PMC2-L-IPG

IPG Dedicated line, Have Type D and Type E/G version , PMC6、PMC2e、PMC2、PCC6 Universal.

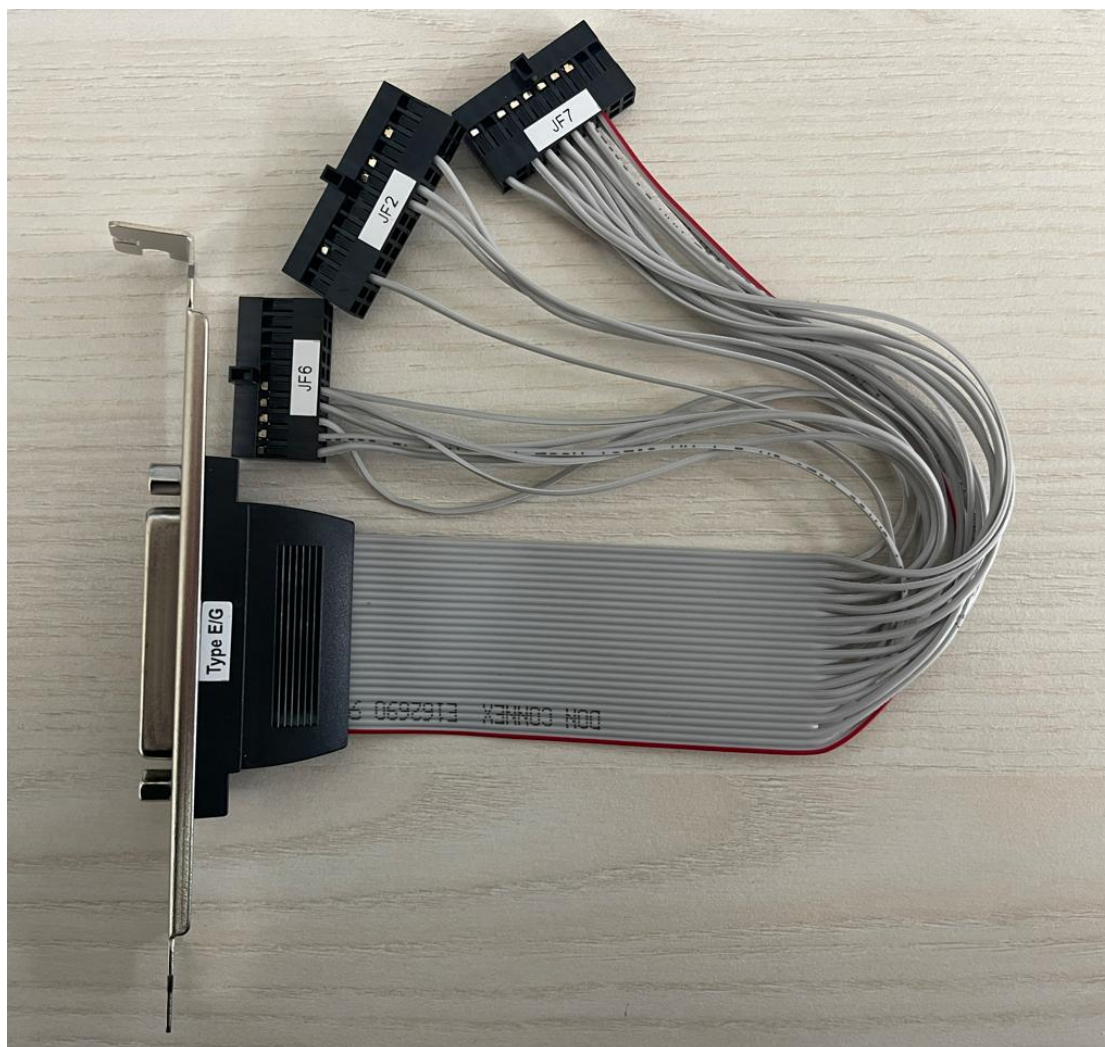

PMC2-L-26-25

For JF1、JF2、JF3、JF4, PMC6、PMC2e、PMC2、PCC6 Universal.

